

# SEA Cloud

## PROFESSIONAL INSTALLER

App


to program  
Control Units  
wherever you are



## END USER

App

to open your gate  
wherever you are

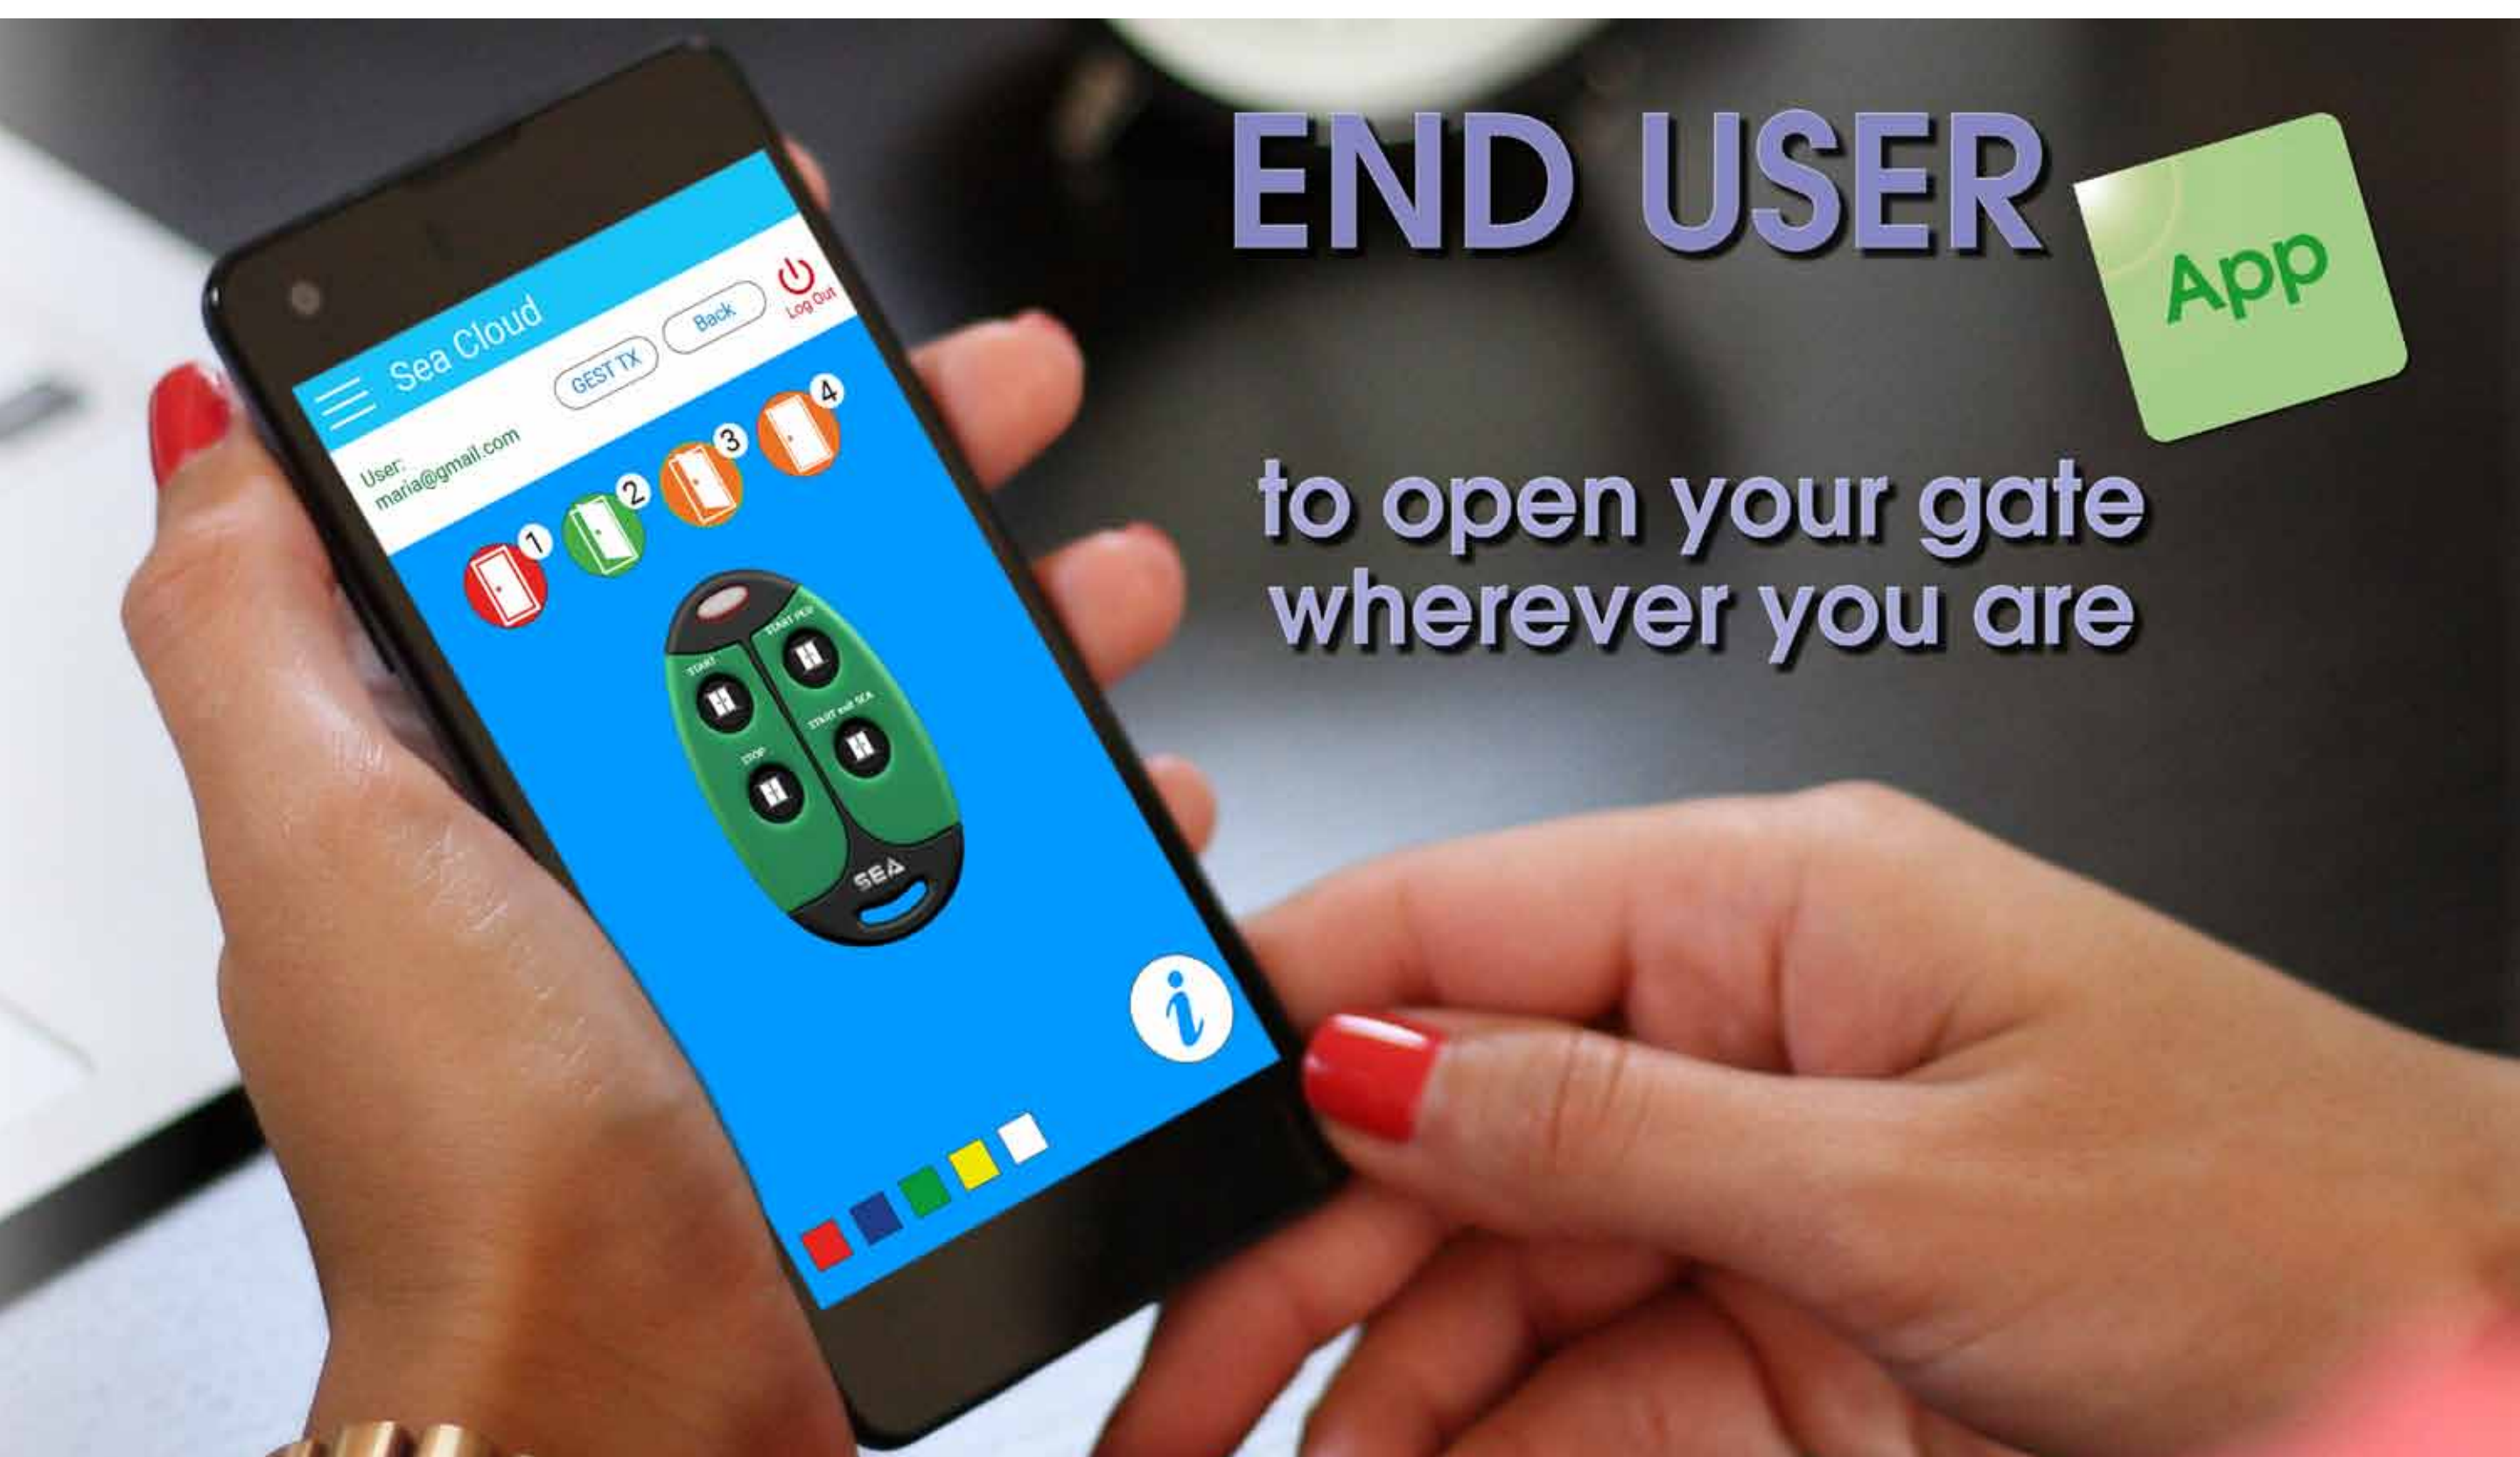

# ENGLISH



67412035 Rev. 03- 03/2022



# Connections

## SEA CLOUD UNI IOT




### PHASE 1



#### 1.1

MAKE CONNECTIONS BETWEEN SEACLOUD UNI IOT AND THE ADAPTEUR MODULE

CALBE  
CONNECTIONS  
ETHERNET ON CNE

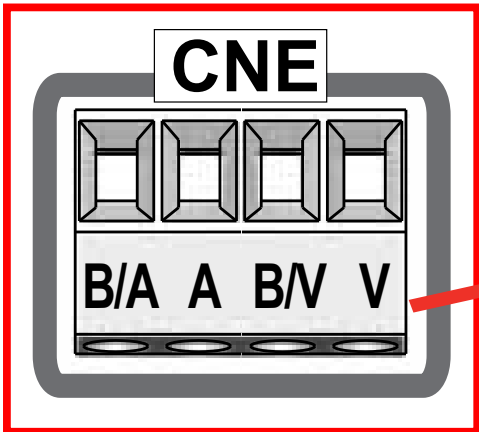


B/A= WHITE/ARANGE  
A= ARANGE  
B/V = WHITE/GREEN  
V=GREEN

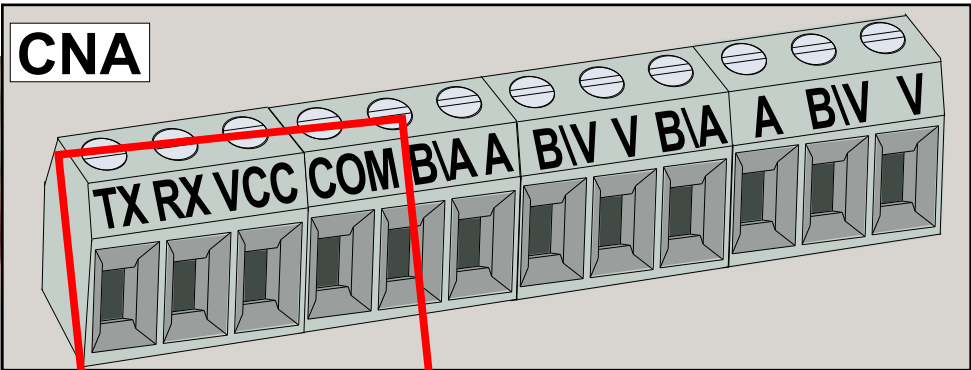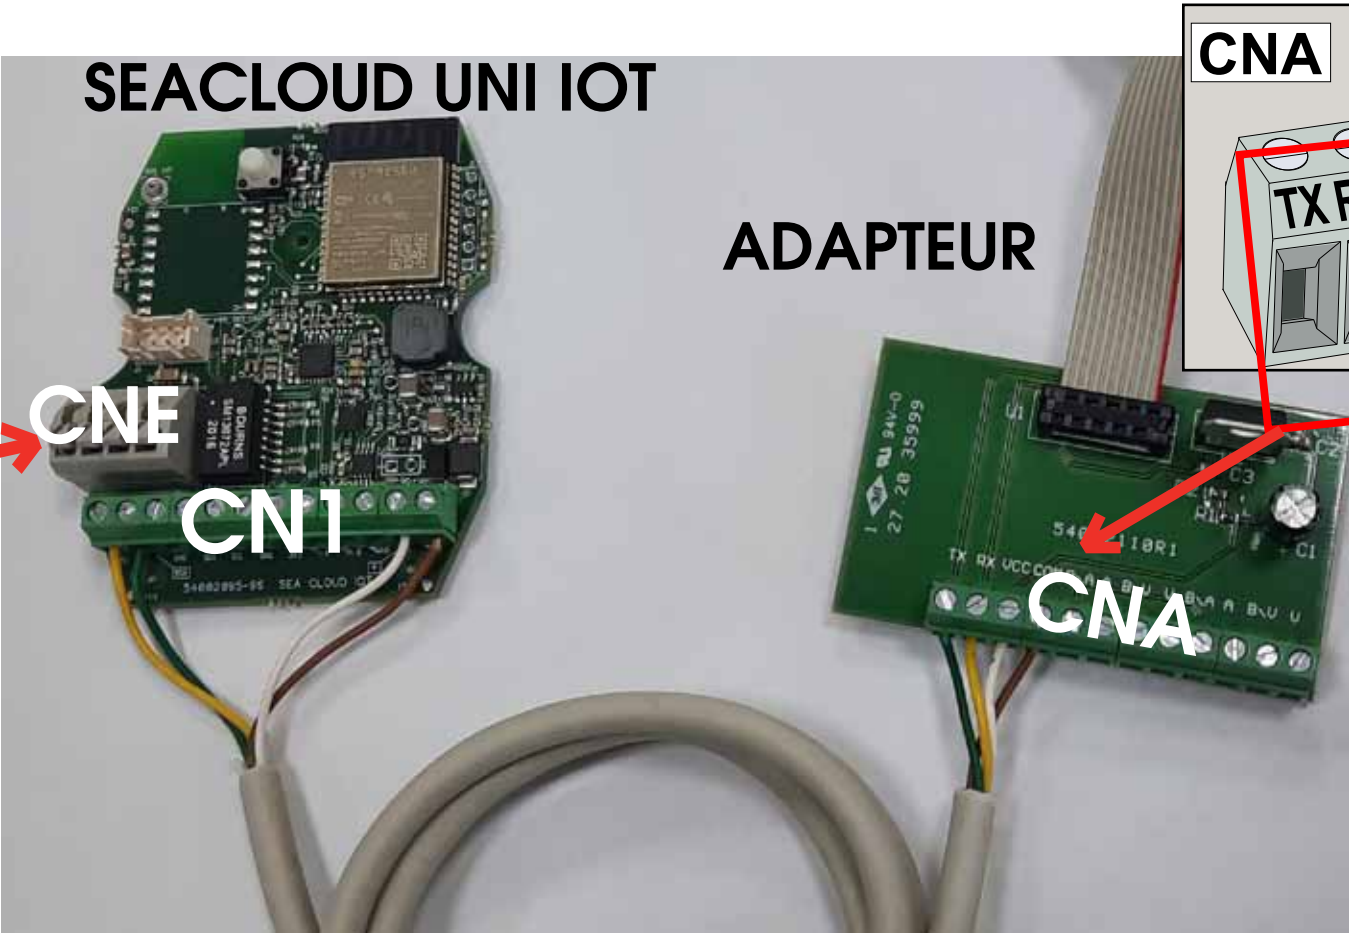

FOR CONNECTIONS  
TO ETHERNET CABLE  
ON TERMINAL BLOCK  
CNE OF  
SEACLOUD.

#### EXAMPLES OF CONNECTION

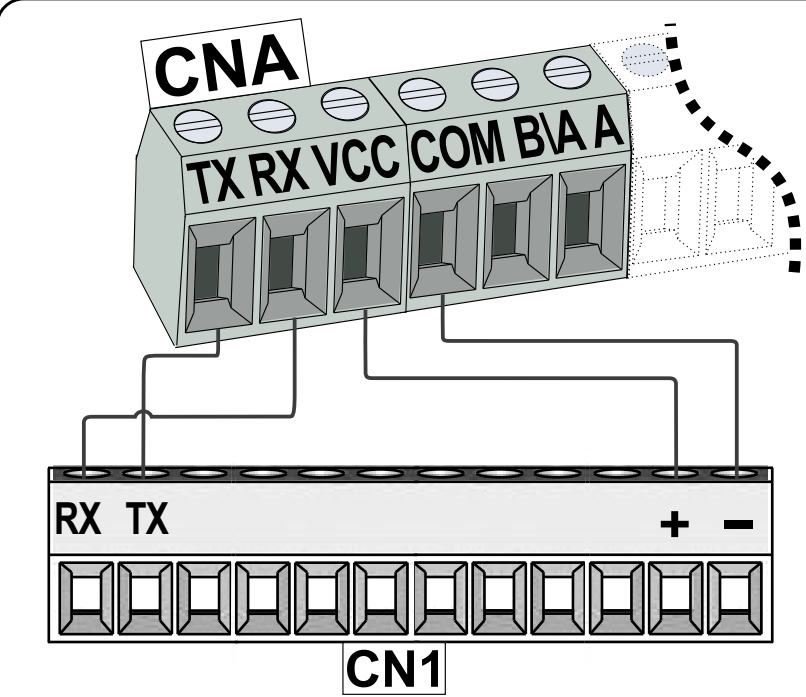



CONNECTION  
SCHEME FOR  
CONTROL UNITS  
«UNIGATE»  
SERIES OR  
MODEL  
USER 2 ALL IN SW

FIG. 3

#### 1.2

CONNECT ADAPTEUR AND CONTROL BOARD VIA SERIAL CABLE SU “JOLLY”

CONTROL  
BOARD

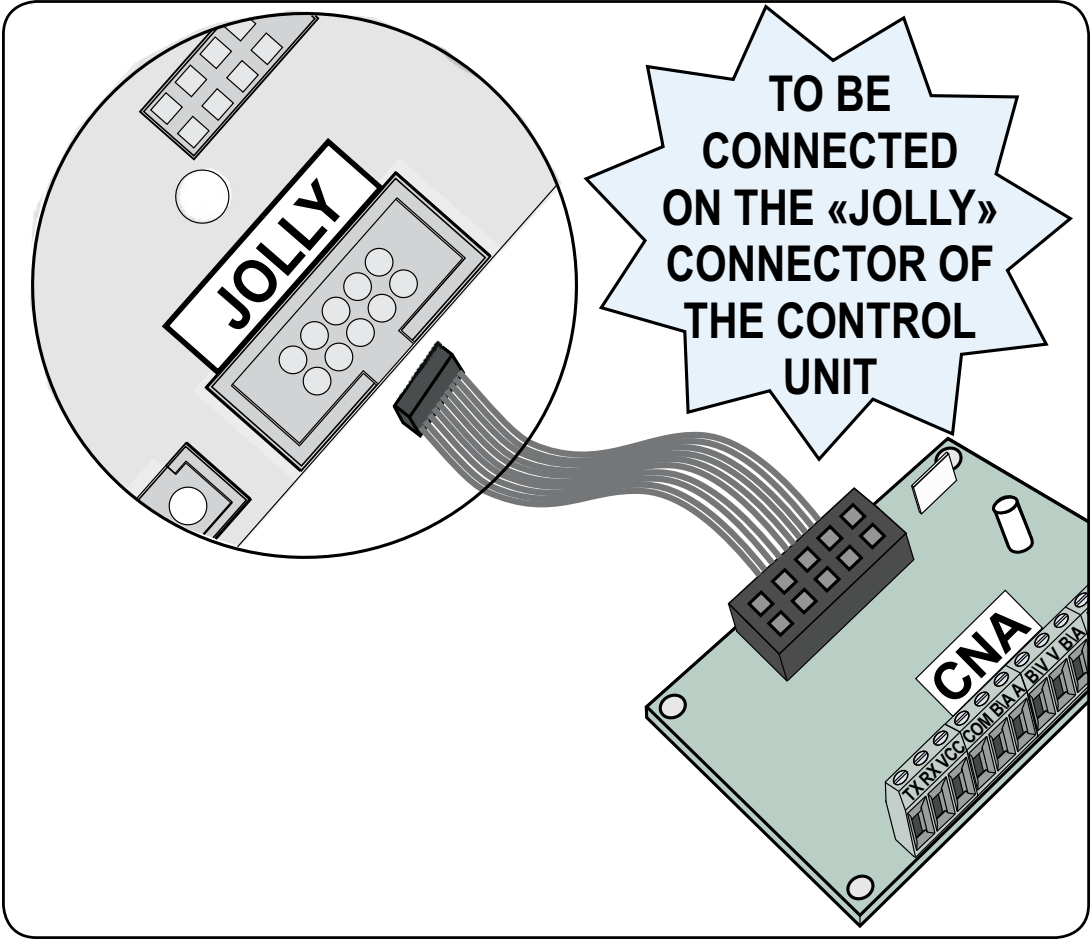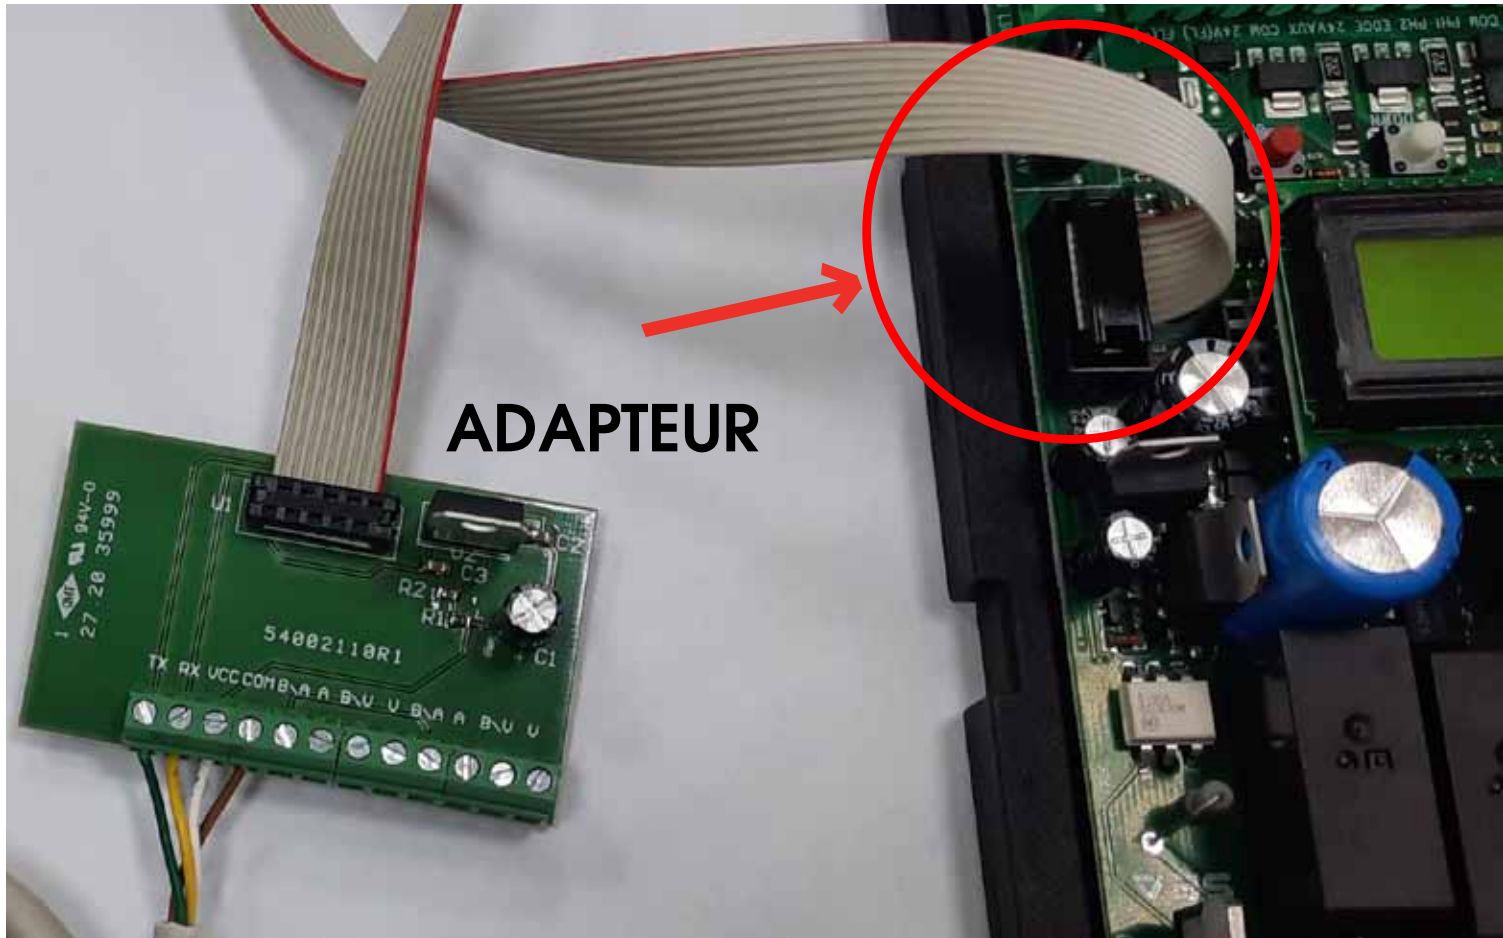



# Installer Guide

Are you a new Installer?  
Visit **www.seacloud.pro** and click on the box to register and request access.

Sea Cloud

IT

GO

SEA CLOUD

Username

Password

☐ Remember me

Log In

Sei un nuovo Installatore?  
Clicca qui, registrati e richiedi l'accesso a SeaTeam!

Sei un Cliente?  
Chiedi i tuoi dati al TUO Installatore.

Manual Installation

Technical PDF

Only the first time!

Nome/Name:

Cognome/Surname:

E-mail:

Ditta/Company:

P.Iva/Codice Fiscale/Vat Number:

Indirizzo/Address:

CAP/Zip Code:

Provincia/City:

Cellulare/Mobile Phone:

Oggetto/Subject:

You will receive an email from SEA with your user name and password.  
Enter them.  
Now request a new device:

Sea Cloud

IT

GO

SEA CLOUD

Gestione impianti utente:

Gestione utenti

Nuovo utente

Richiesta nuovo dispositivo

Nome

Mac Addr

Log


Modifica

Sea Azienda

0c:ef:af:cf:fd:00

Log

Fill in the form, you can find the MAC address here:

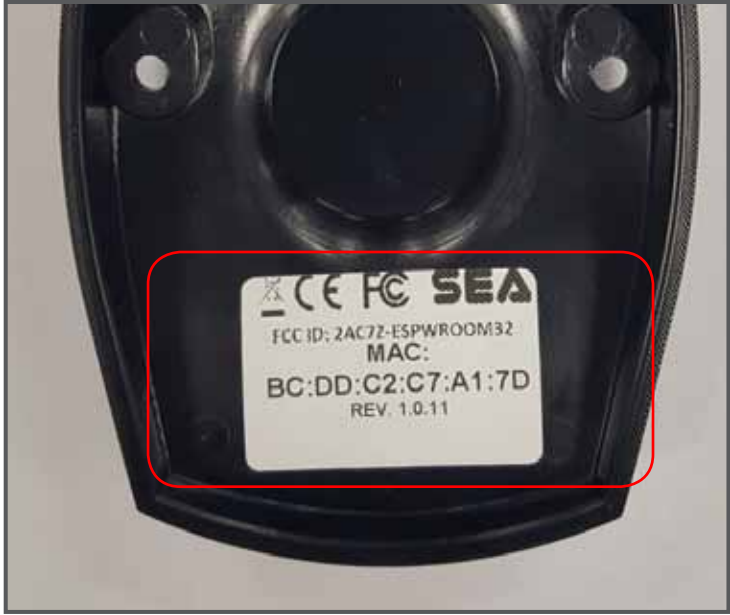

Sea Cloud

IT

GO

SEA CLOUD

Richiesta nuovo dispositivo

Back

Nome Impianto

E-mail Installatore registrata  
Installer Mail already registred:

Ditta/Company:


MAC Address: ( example 0C:EF:AF:FC:FD:13)

Tipo di impianto  
Scegli/Select




Cellulare/Mobile Phone:

Oggetto/Subject:

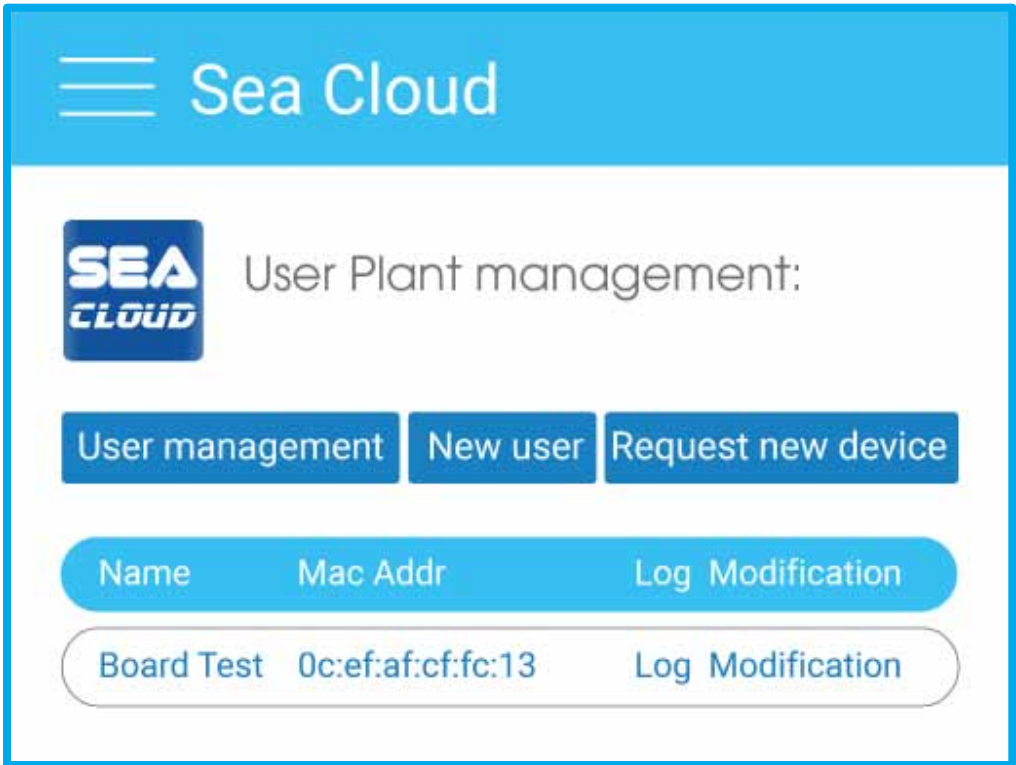You will receive a confirmation email by SEA.  
After that your device is available into the list of your Sites.



Now, it's time to connect the router to the gate, choose the method you prefer:

- 1 **Cavo LAN** 
- 2 **Powerline Adapter** 
- 3 


Each type of configuration can be performed by any type of device.

## LAN Cable configuration

If your home router has DHCP enabled, just connect the Ethernet cable to the LAN socket.  
Connect the router to the socket and wait that the light becomes fixed.

Didn't you connect the LAN cable to the router?  
You can do it through a Powerline Adapter!

## Powerline Adapter configuration


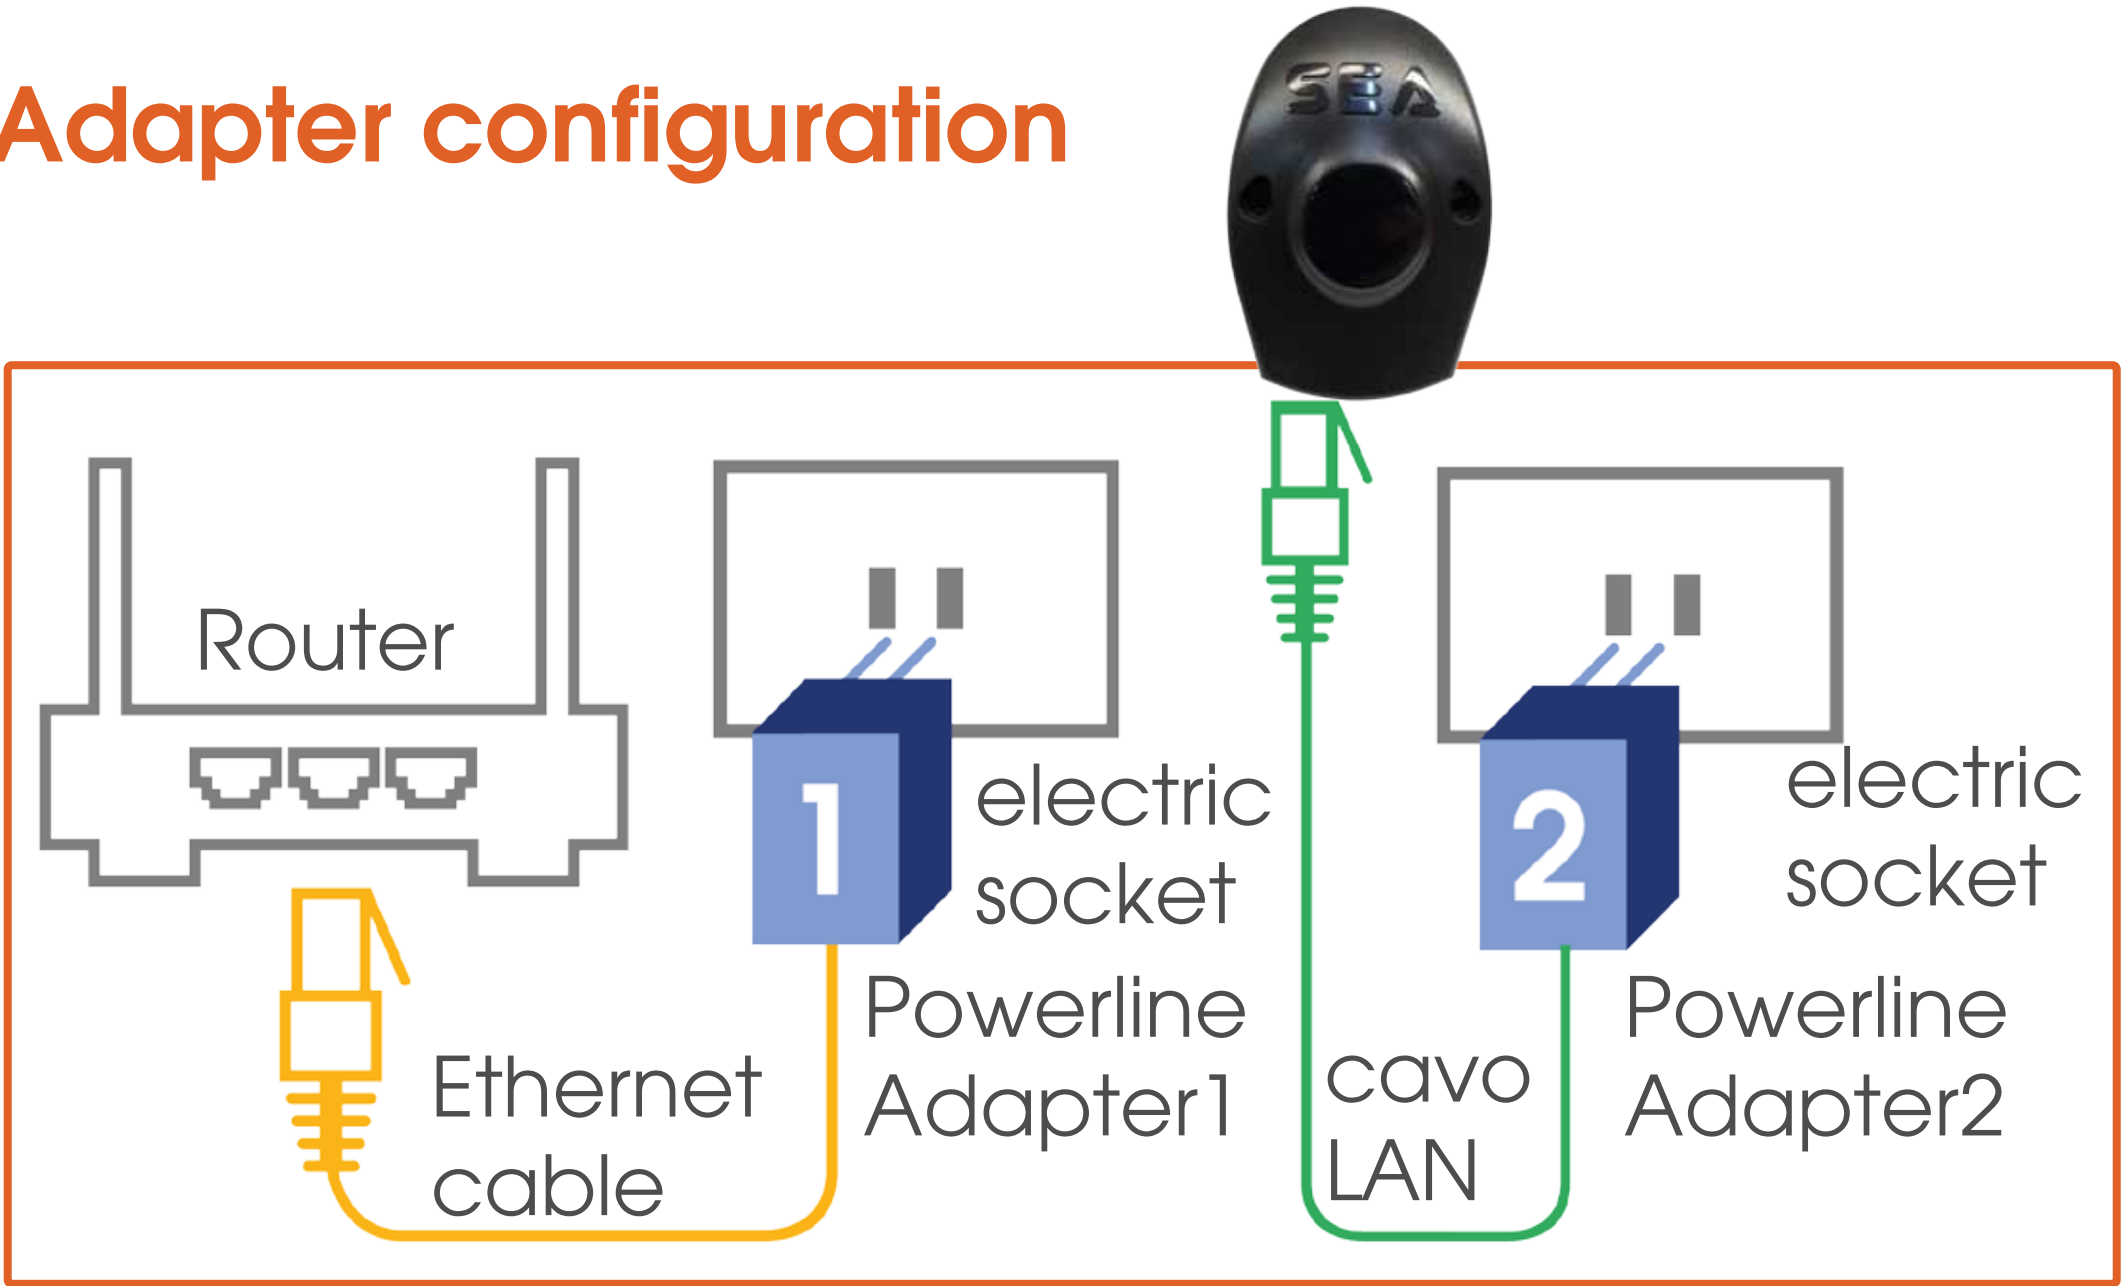


Connect the LAN cable into LAN entry of the router.




# Wi-Fi configuration

- 1. User your phone or PC, to find Wi-Fi network of Wi-Fi del SEA Cloud UNI IOT **SEA XXXXXX** ( SEA MAC ADDRESS of SEA Cloud UNI IOT device)
- 2. Enter into Wi-Fi of the device and insert the password **seacloud**
- 3. Open any browser, write the IP: **192.168.4.1** and press ENTER

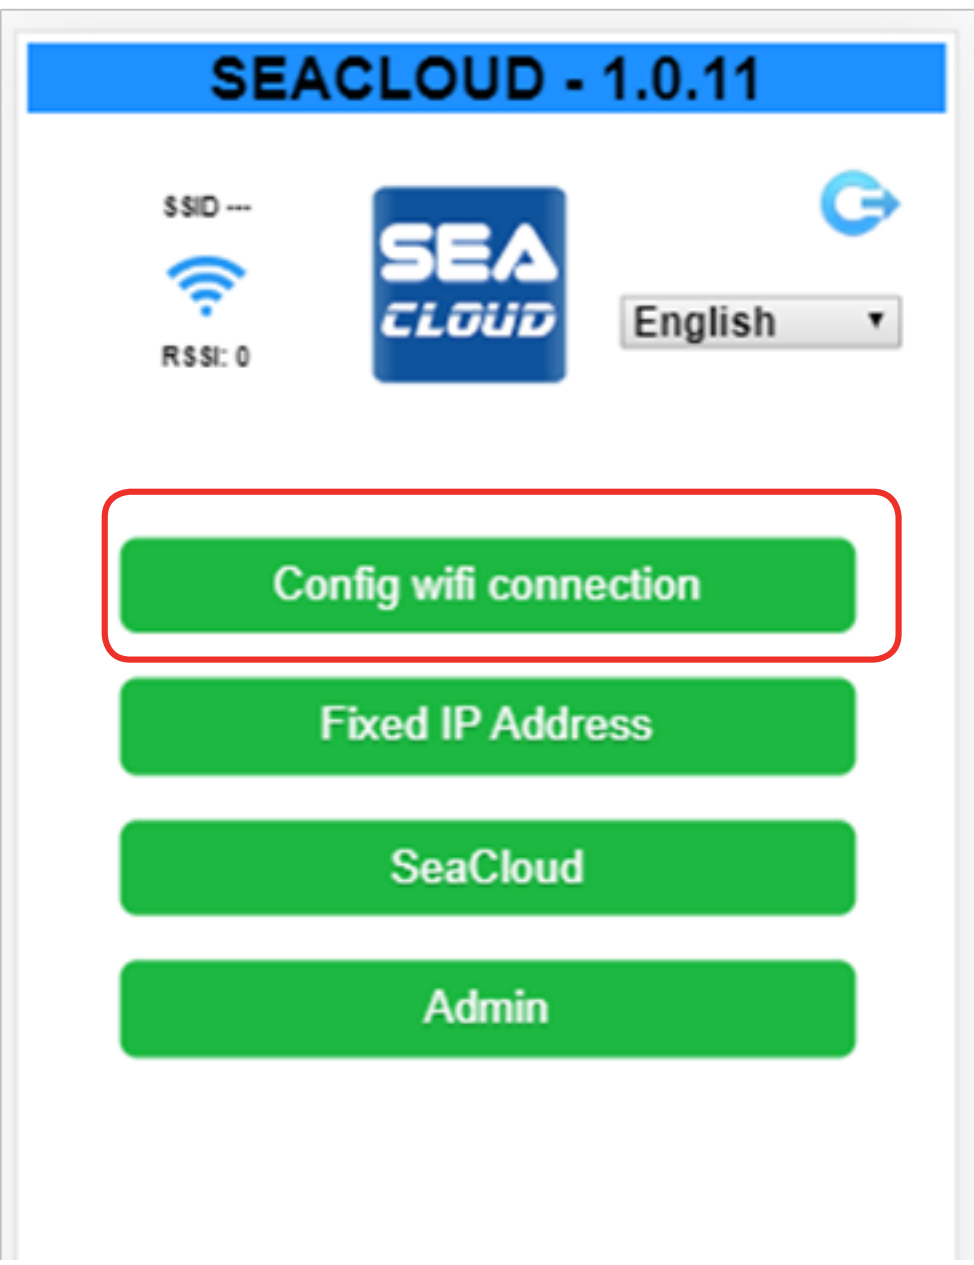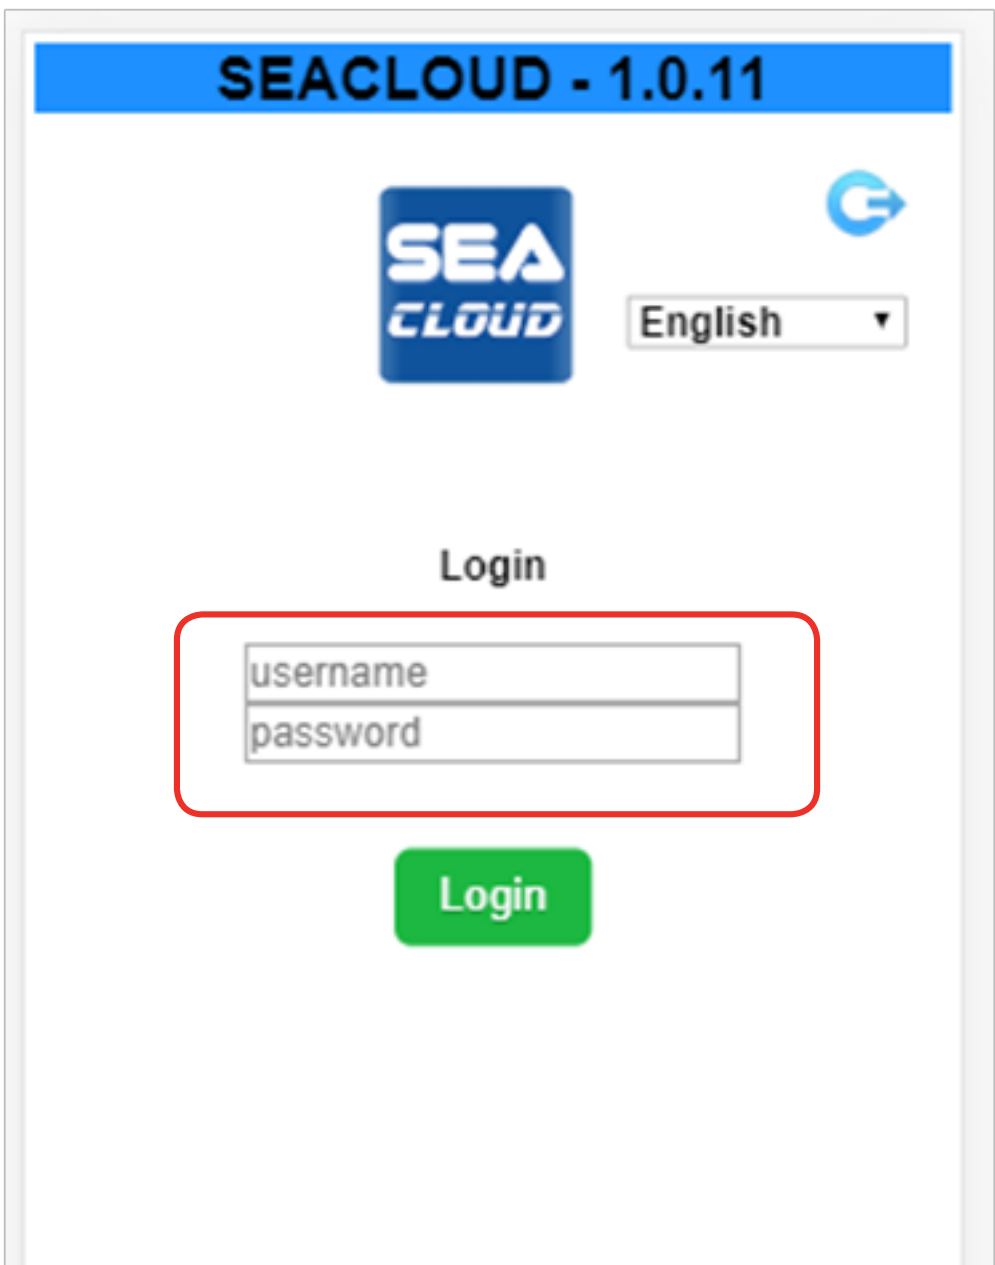



Enter the following default credentials and press ENTER  
(the password can be changed later):  
Username: admin  
Password: admin

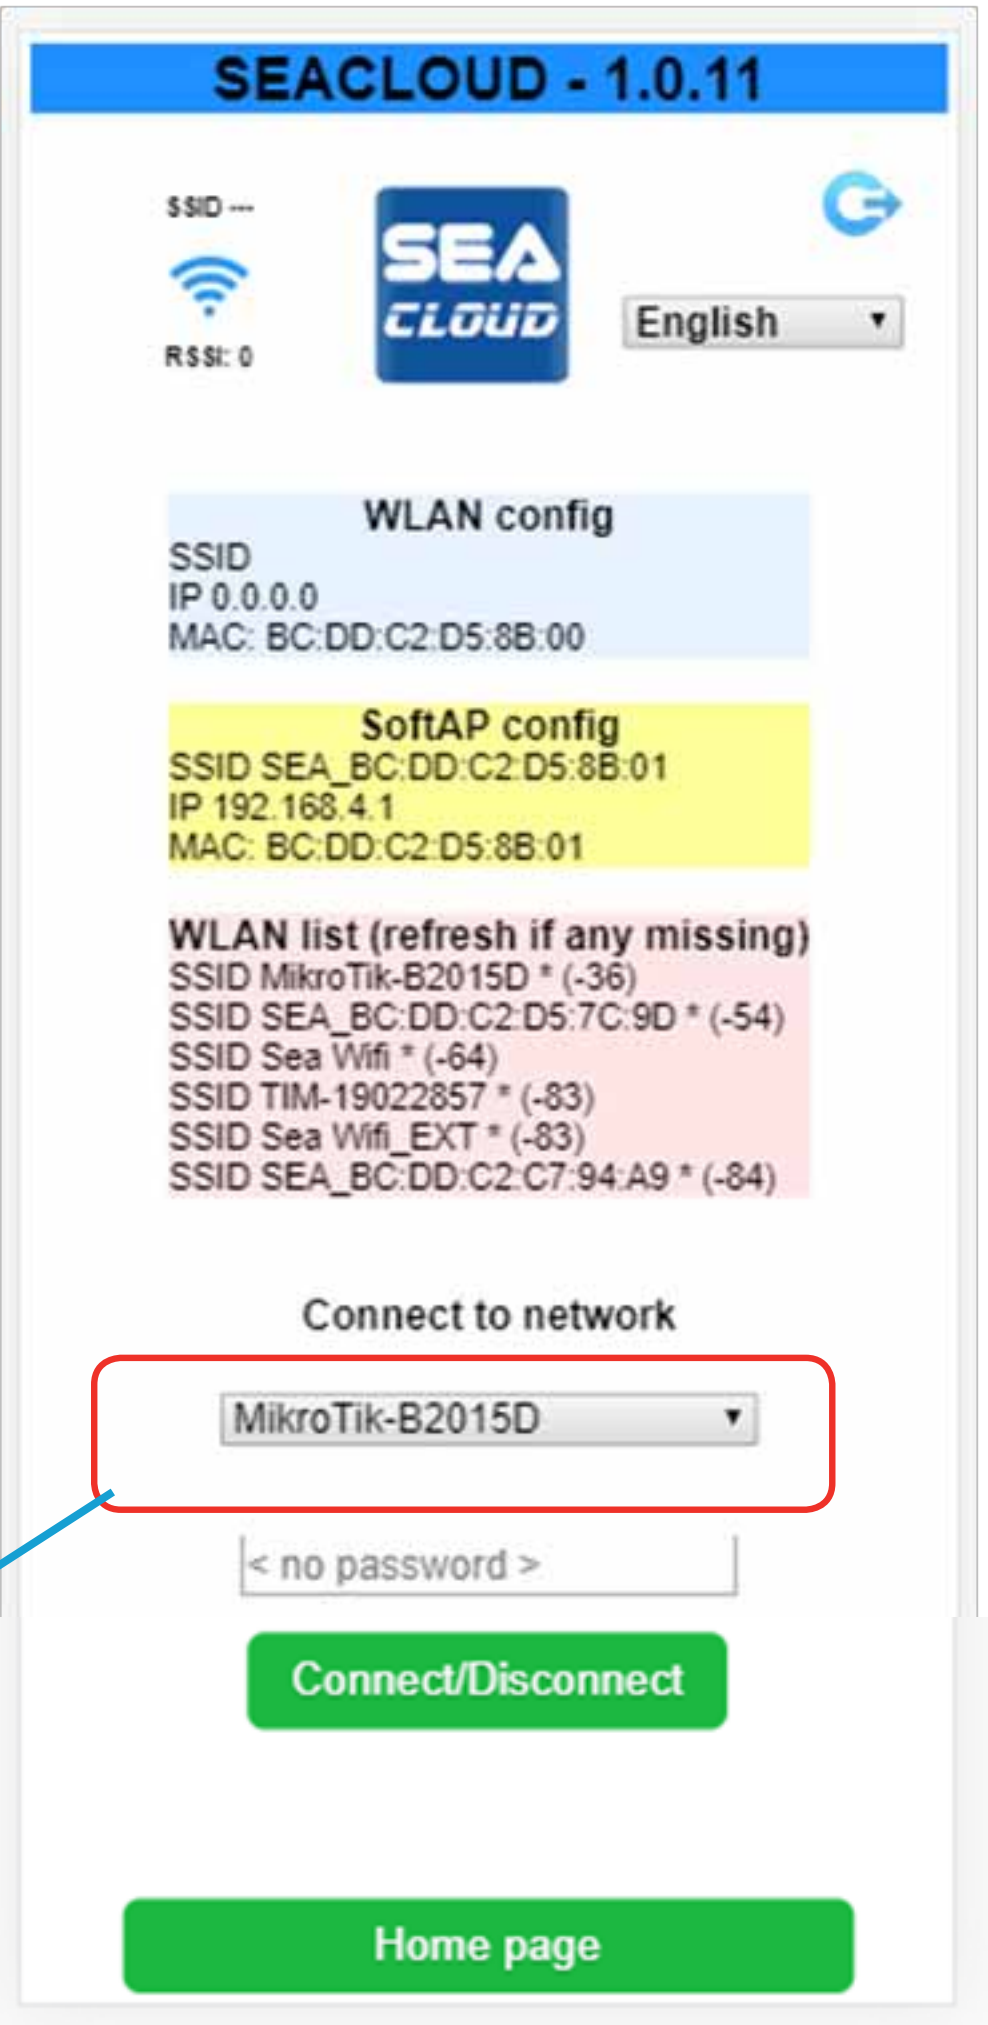

Choose your Wi Fi network  
and enter the password



# STATIC IP CONFIGURATION

Enter your data

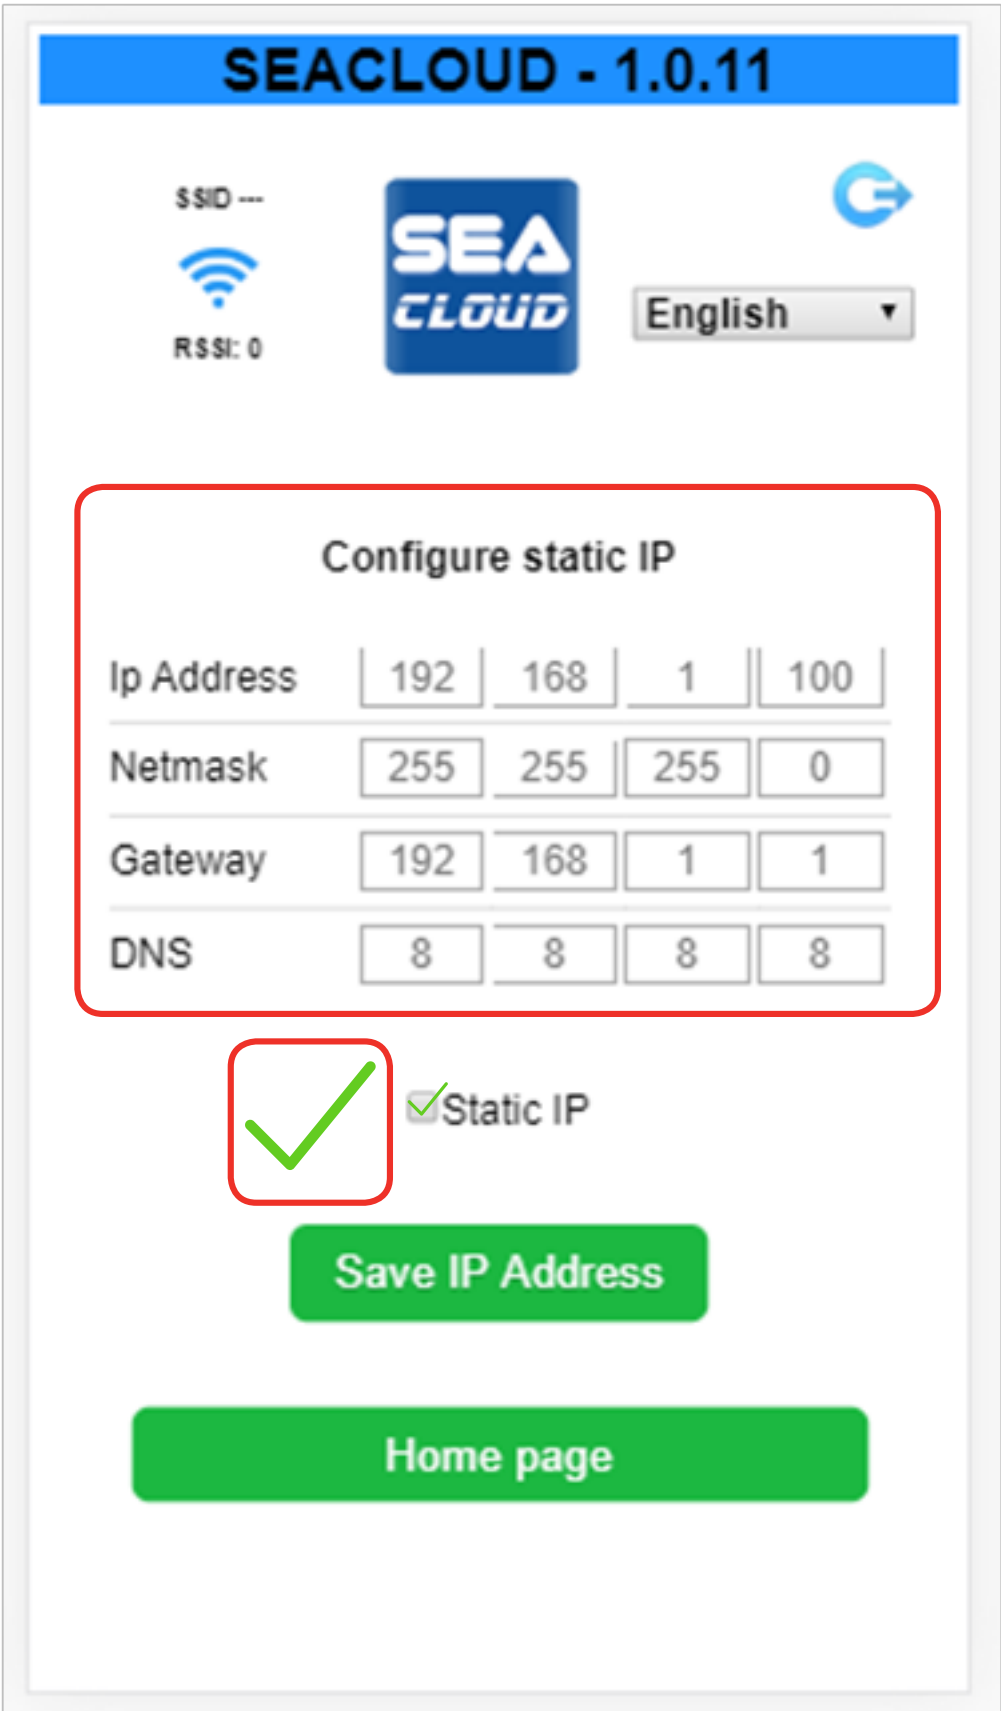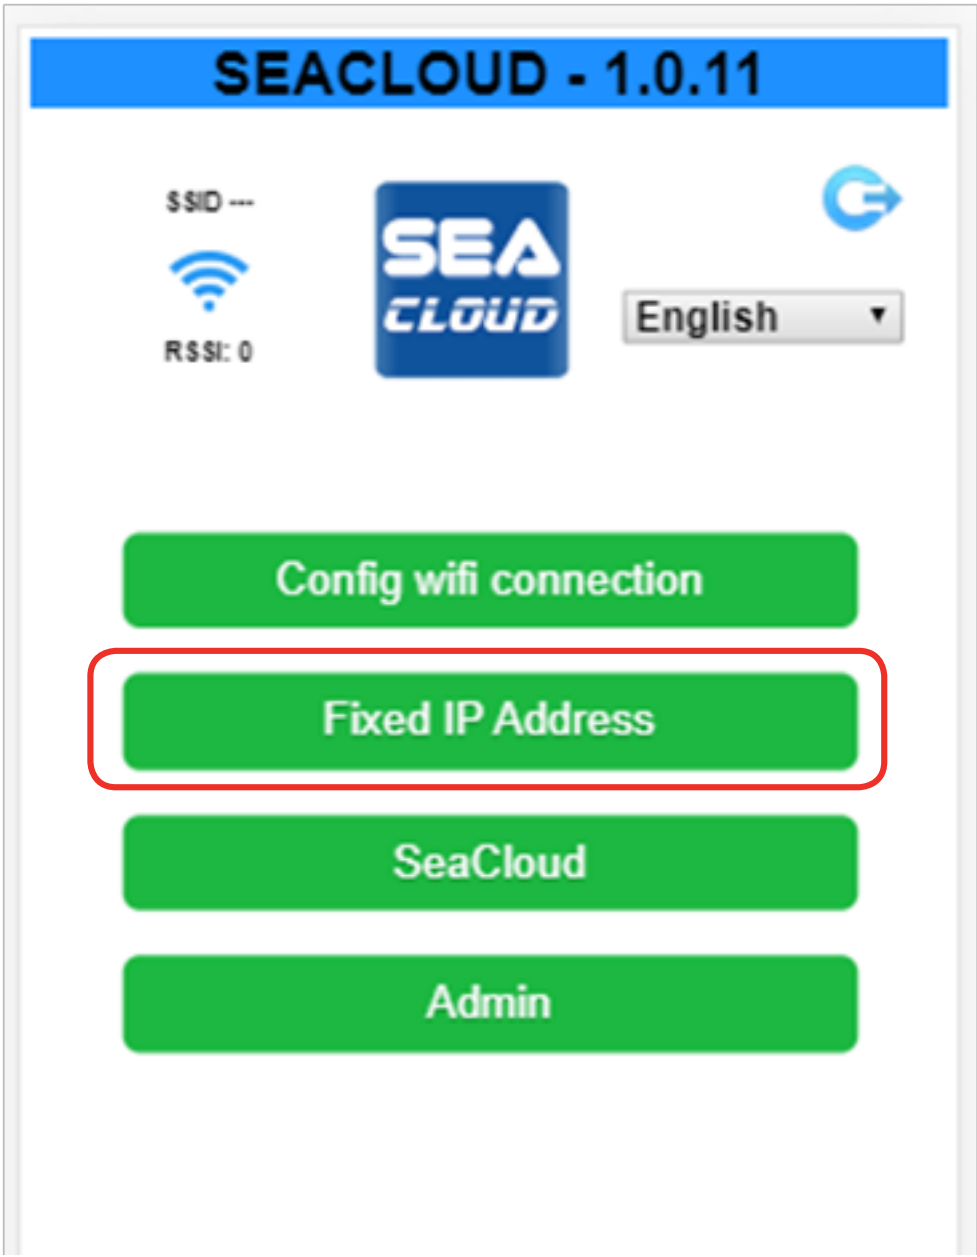


# Change “Administrator Password”


Password di default : admin  
Change your password

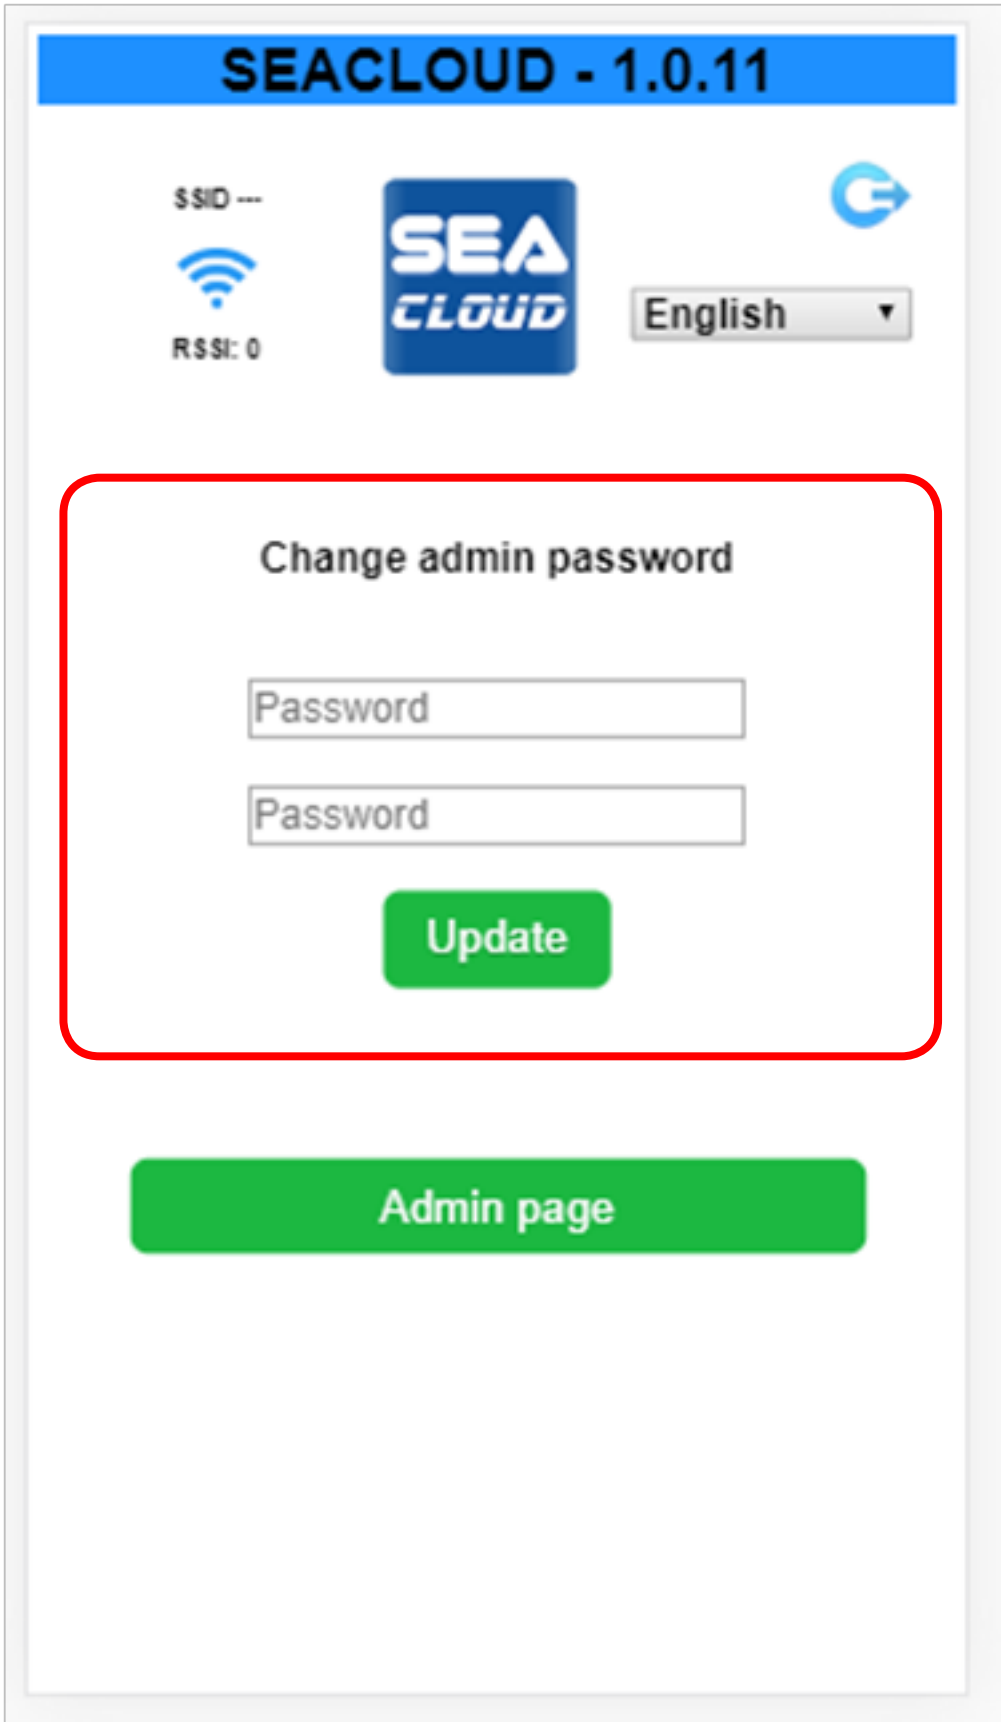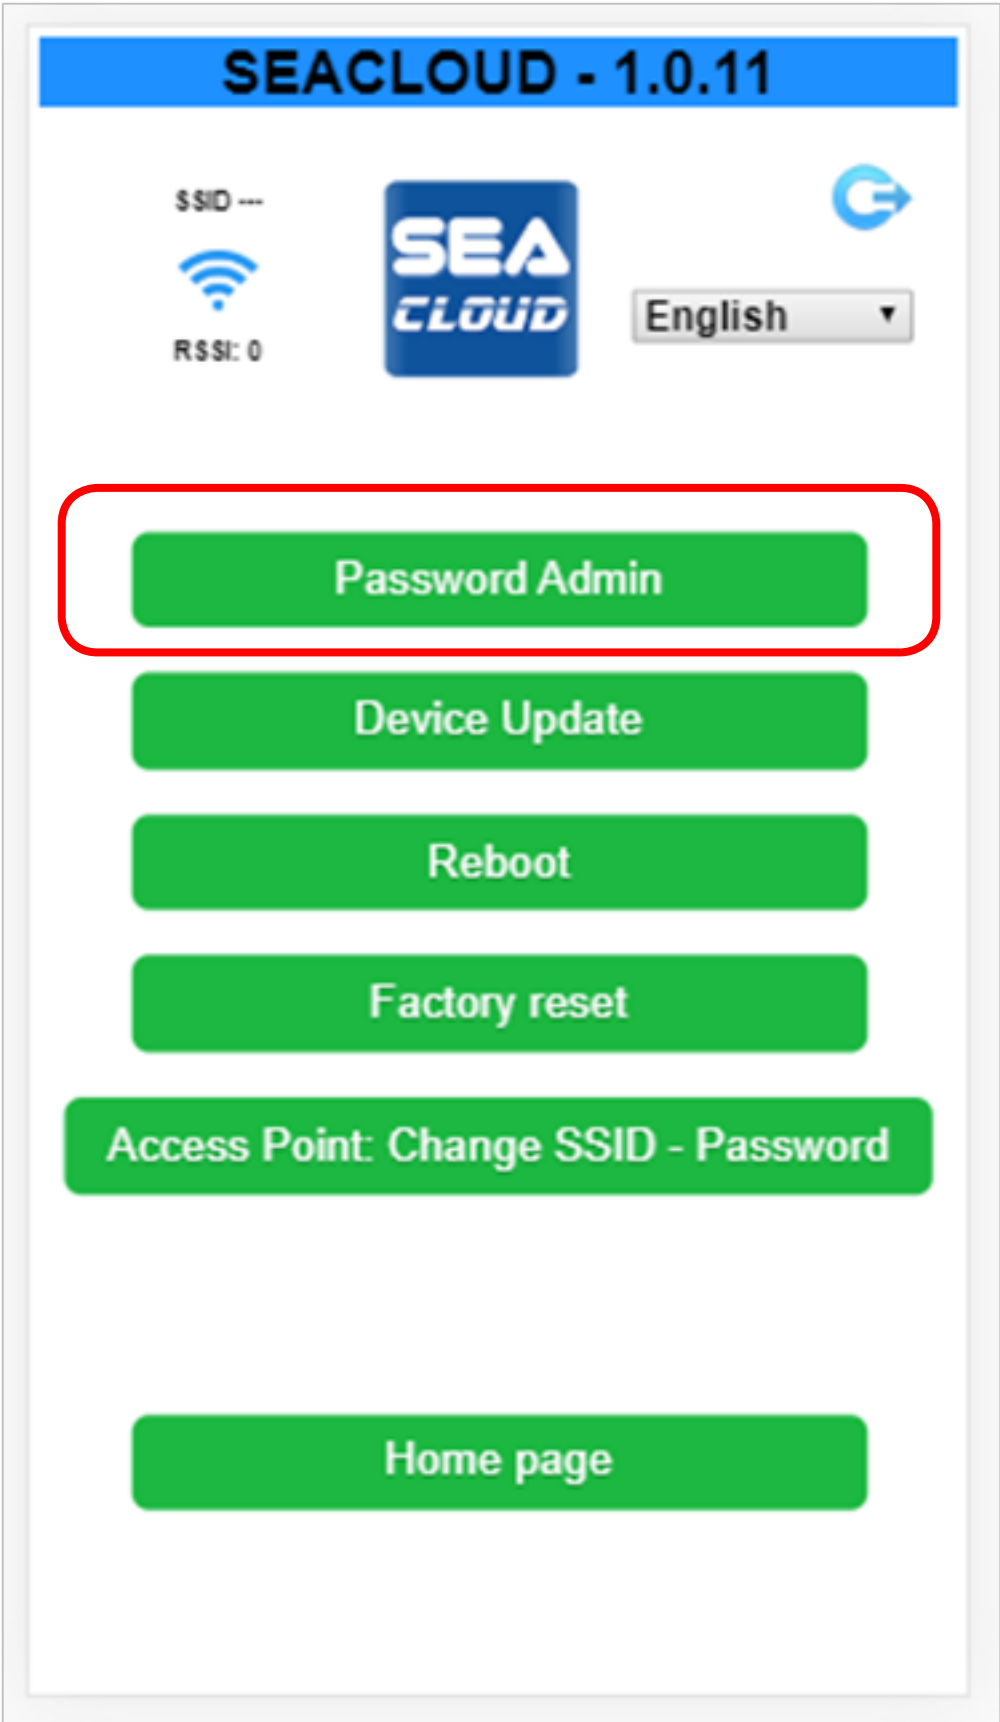


# Devise Update

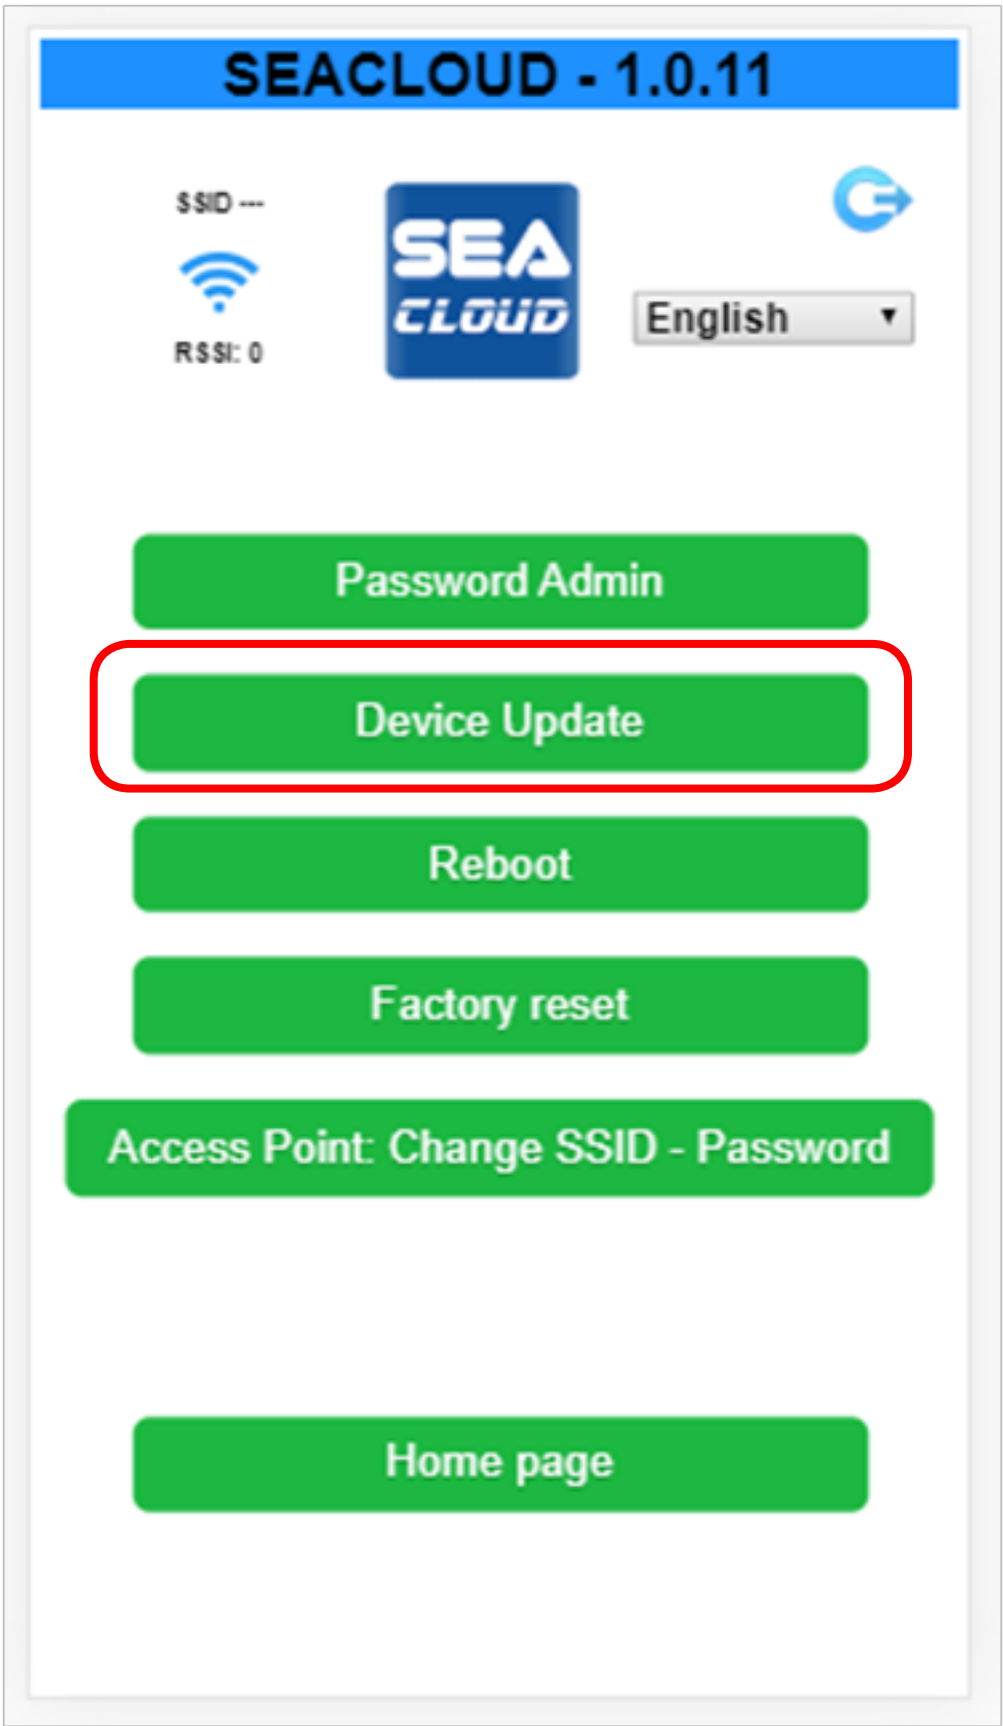


Update OTA of device

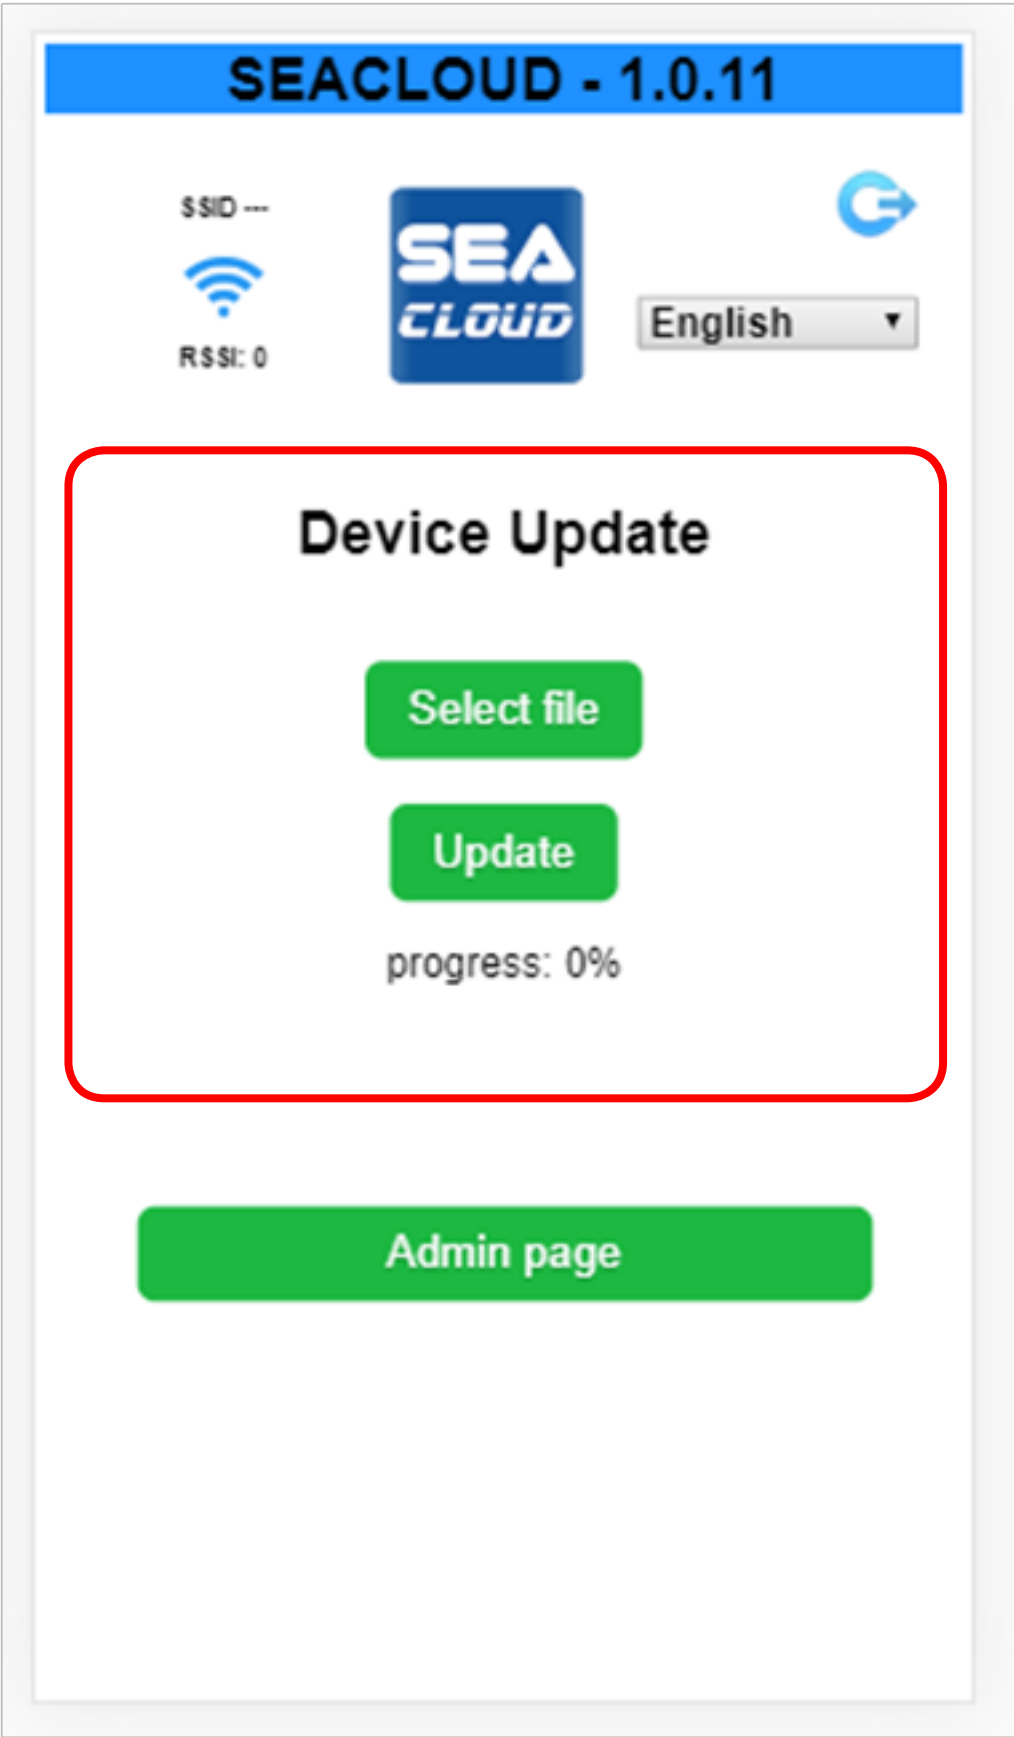

# Restart

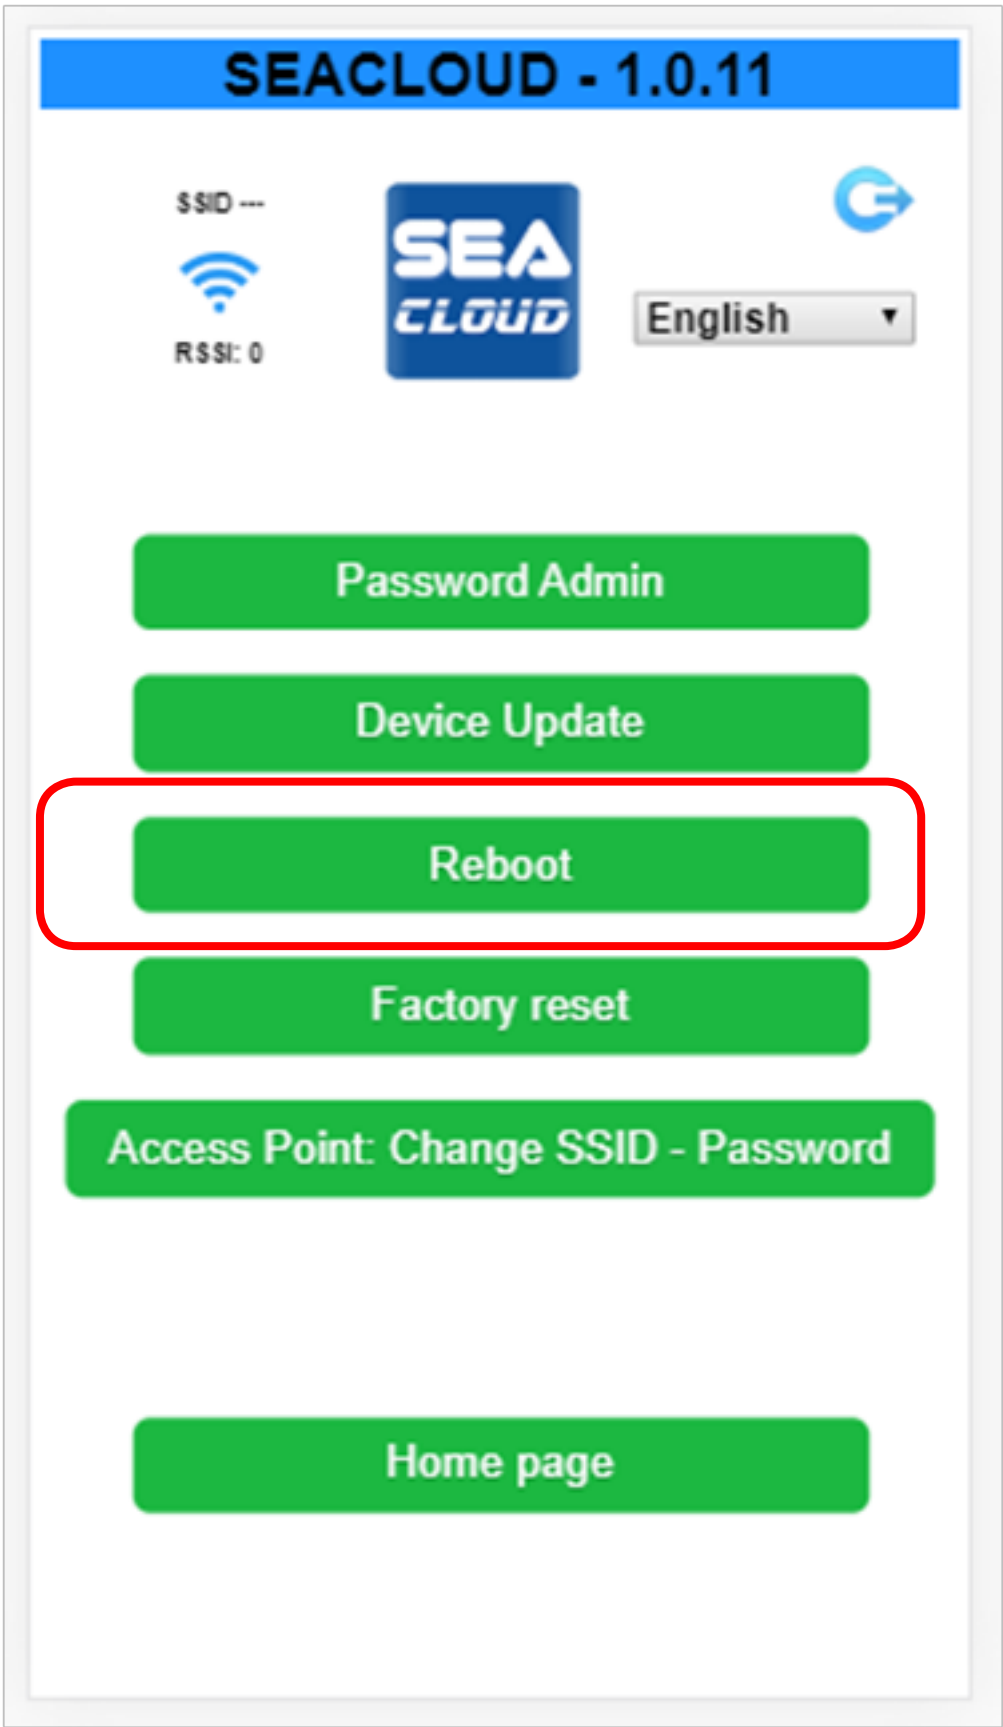



Reboot your device

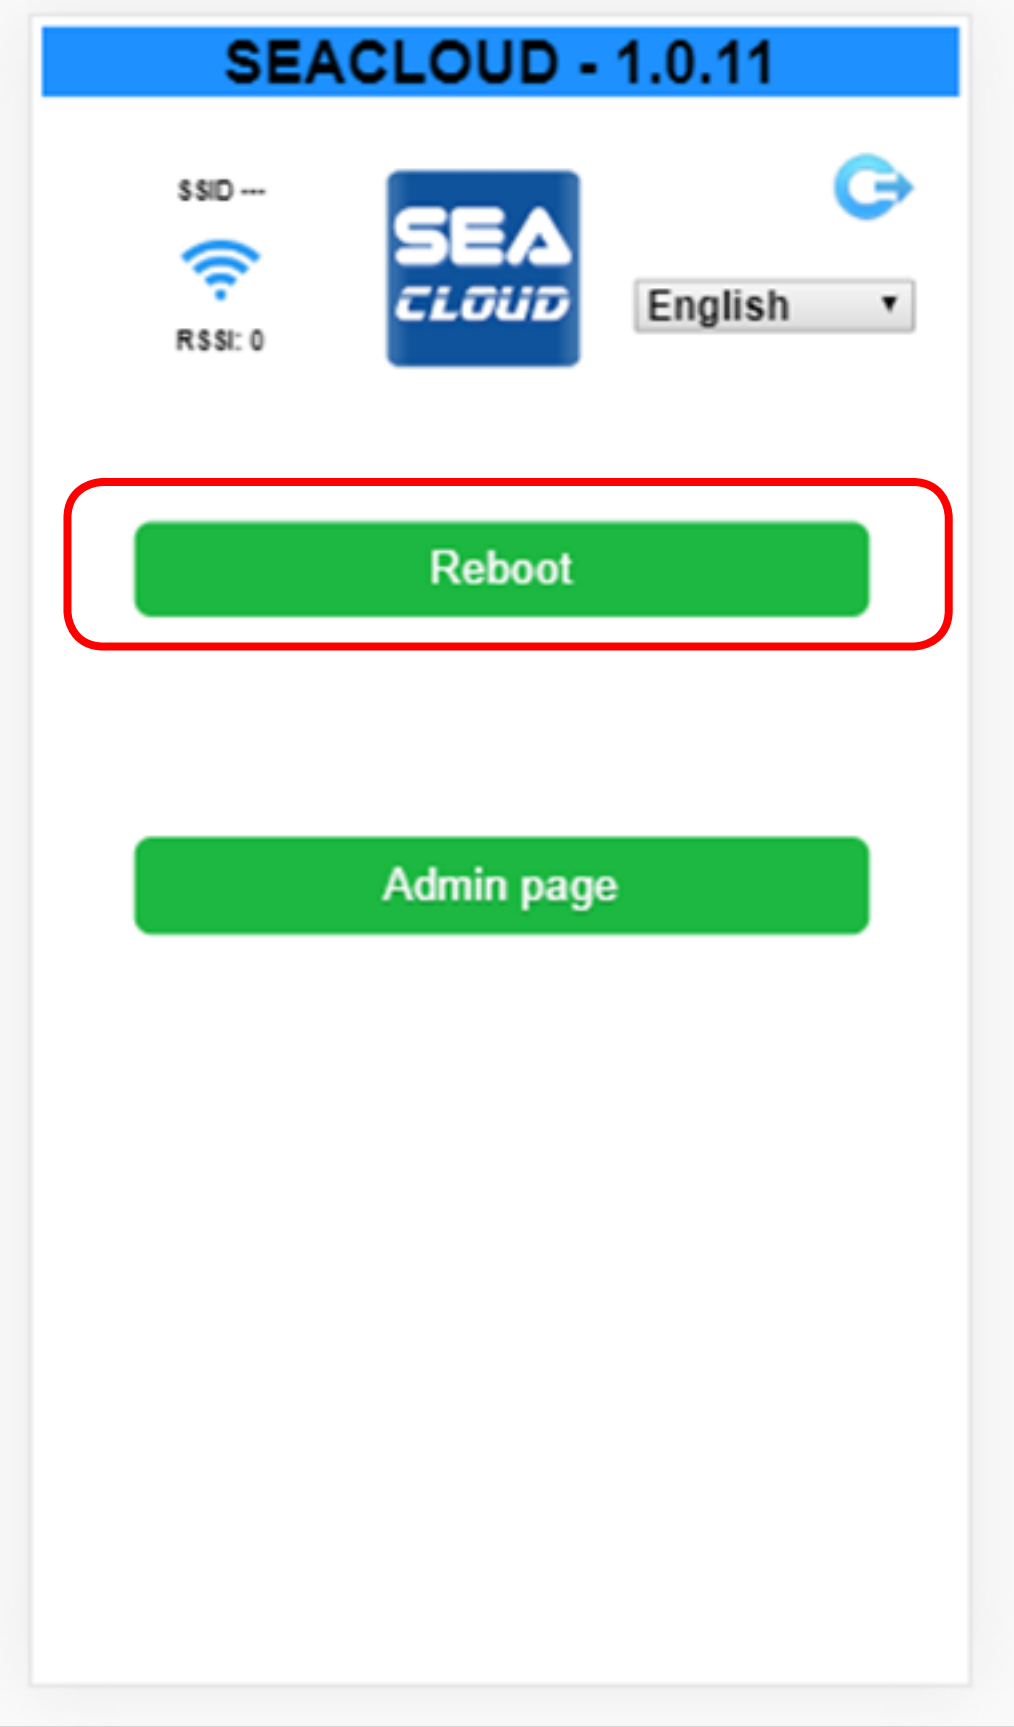





# Factory Reset

Factory reset, cancellation of all settings

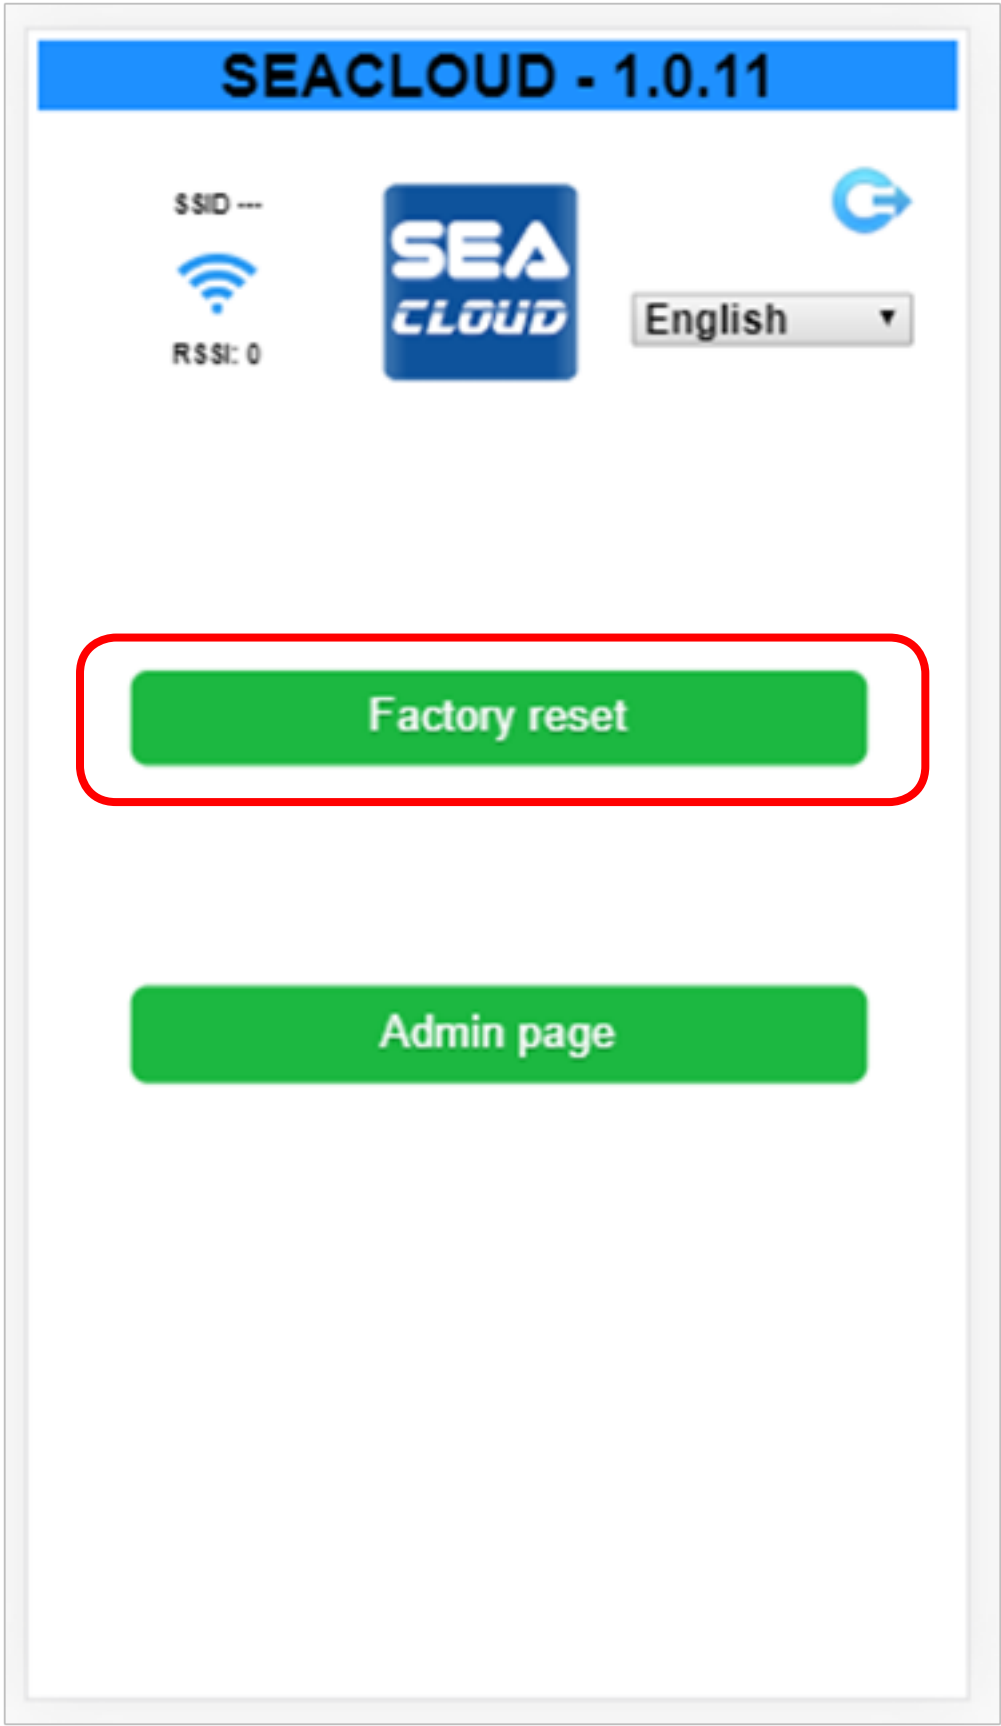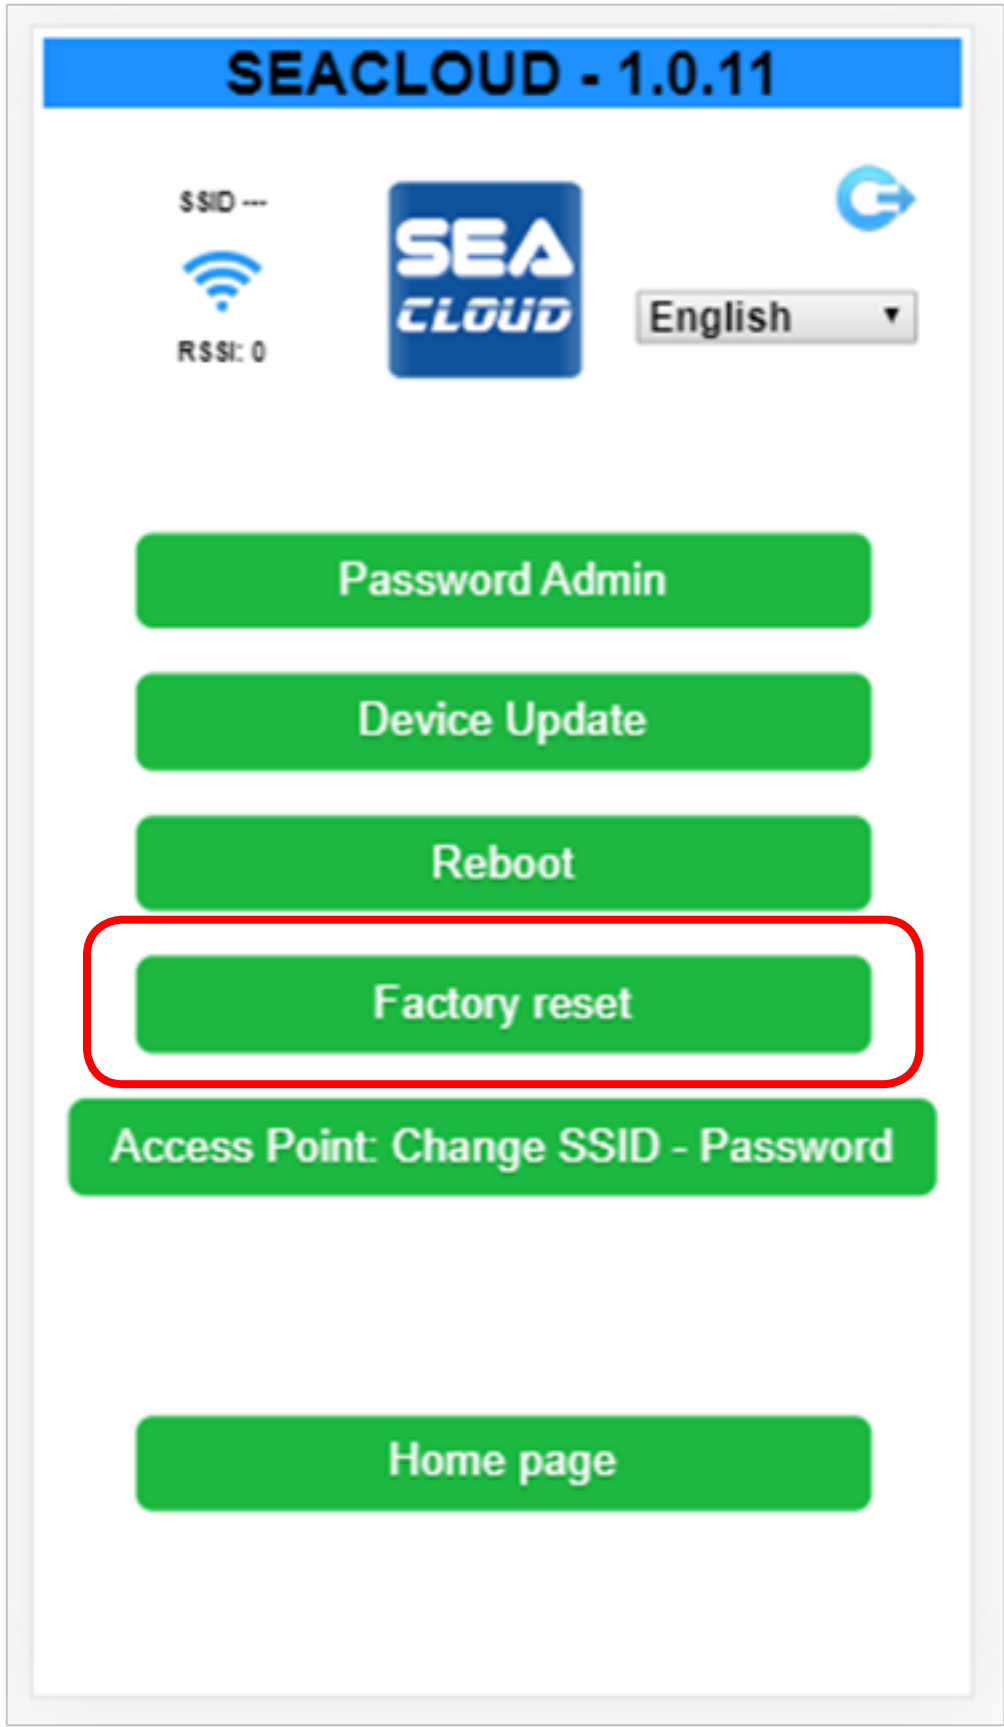

# Access Point change SSID - password

Rename the device's WI FI access point

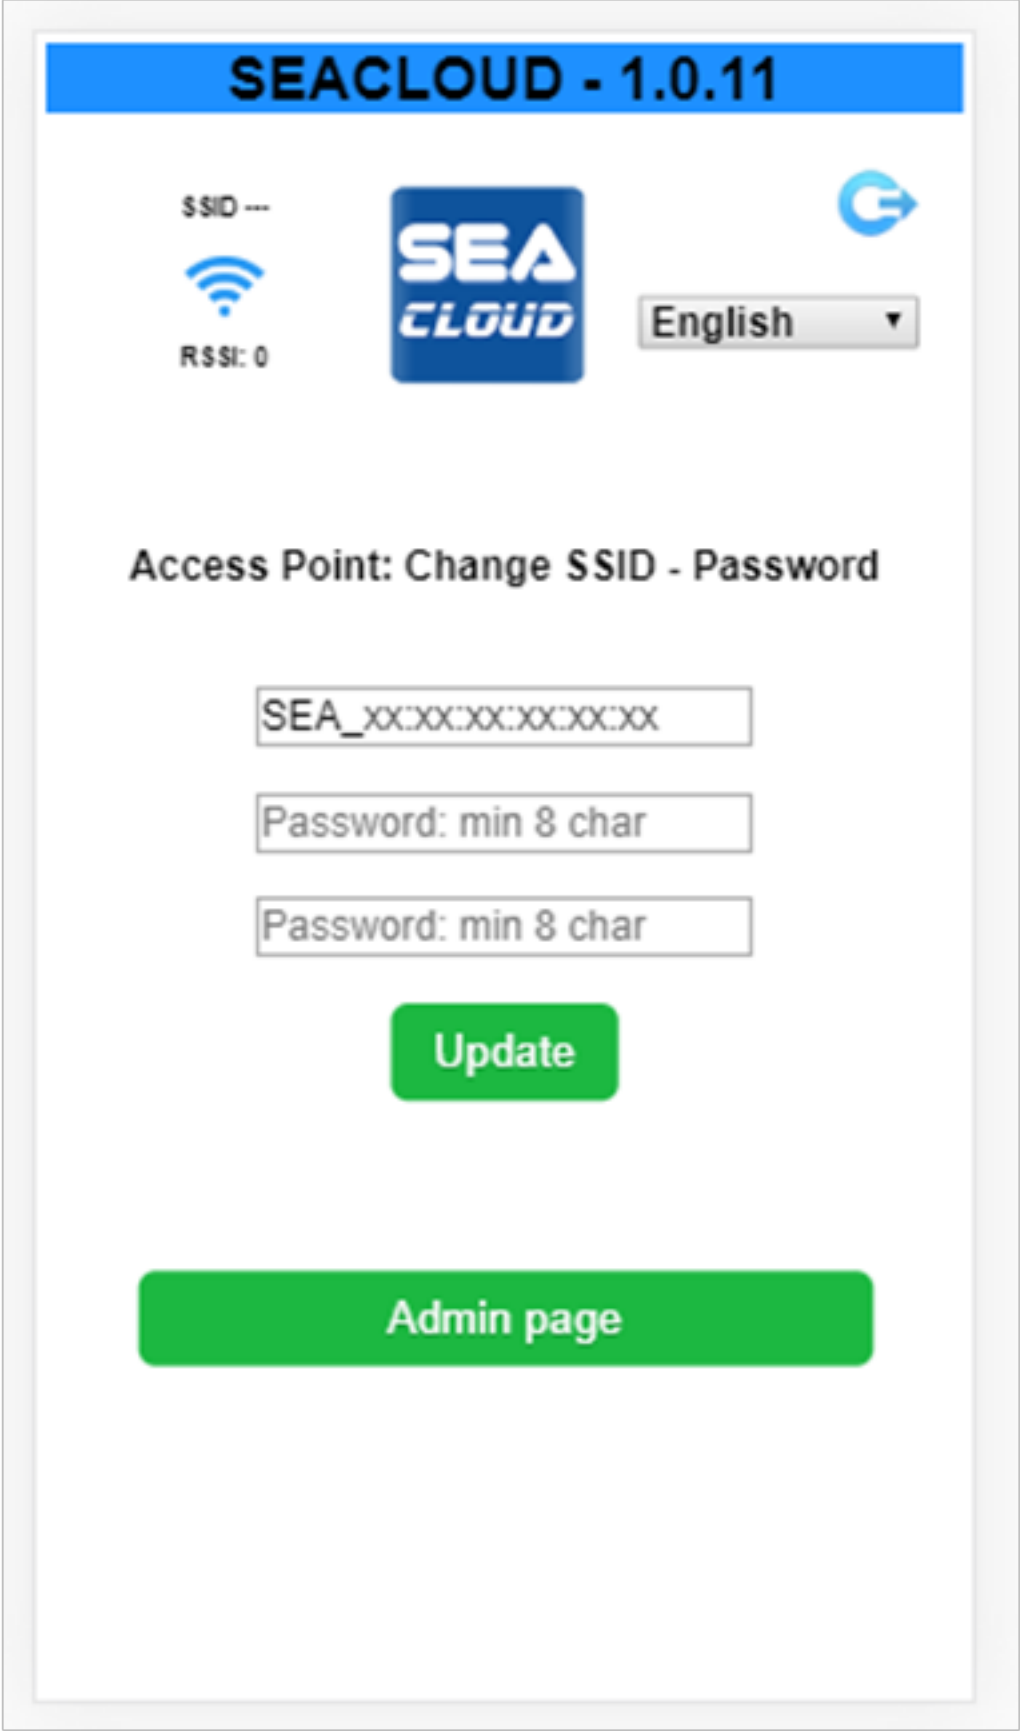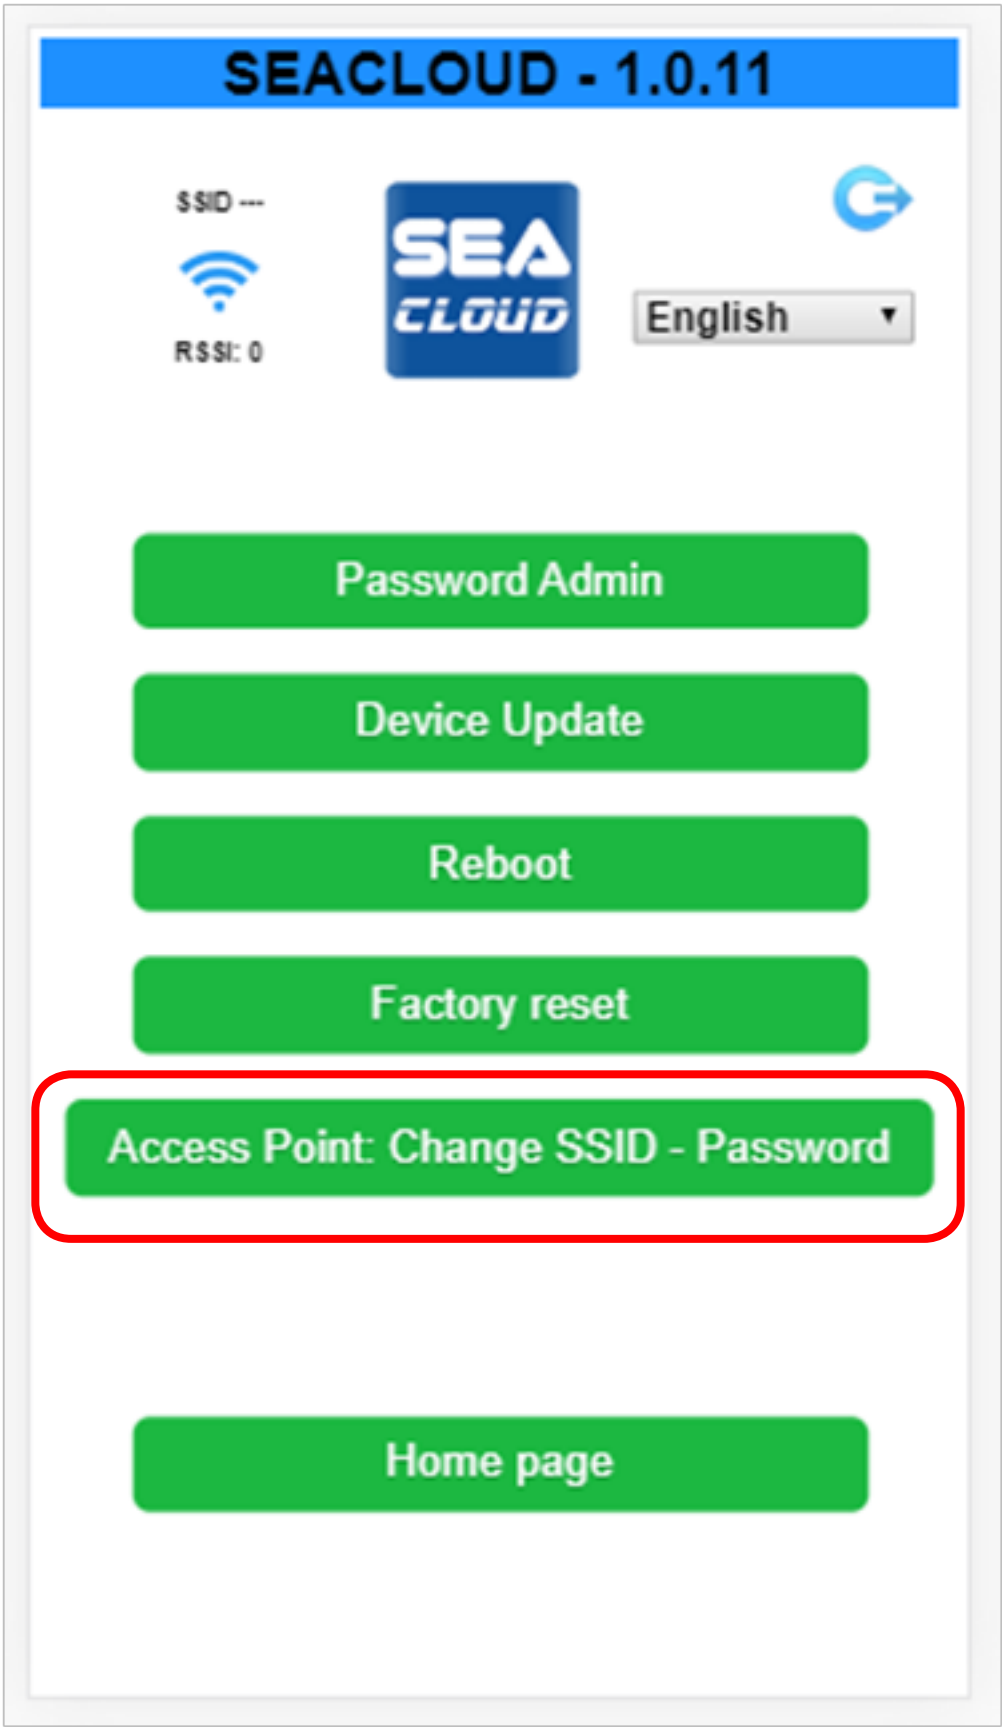



# Now you can enter into the Sea Cloud APP and manage your devices.

Download the I'APP Sea Cloud on the Google Play or Apple Store.



## SEA Cloud

Enter all data of your end users

Sea Cloud

IT

☐ Remember me

Sea Cloud

User Plant management:

User management

New user

Request new device

Name

Mac Addr

Log

Modification

Board Test

0c:ef:af:cf:fc:13

Log

Modification

Click on your device to manage your Control Board:

TEST  
verify the status of the entrance

SERVICE  
reset work cycles

@ALARM  
receive email of alarms

@FAULT  
receive email of faults

UP  
scroll up

START  
open/close command

START Pedestrian  
partial opening command

scroll down

OK  
confirmation

STOP  
stop command

The image shows a hand holding a smartphone displaying the SEA Cloud app. The screen features a green background with a circuit pattern. At the top, there's a status bar with 'IT' and 'Go' buttons. Below that, there are buttons for 'TEST', 'SERVICE', '@Alarm', and '@Fault'. A central green box displays 'APERTO1', '001111', and '0100'. Below this, there are 'UP', 'DOWN', 'START', and 'STOP' buttons, along with an 'OK' button. At the bottom, there's a 'MENU BOX LIST' with options: '1 LANGUAGE', '2 TRANSMITTERS', '3 MOTOR', '4 ONE SINGLE LEAF', and '5 REVERSE MOTOR'. A hand is shown pressing the 'START' button.

Compatible with control units with revision Firmware 2.0 and later



**MENU BOX LIST**  
you can scroll down the entire menù or text the number of the menù that you want in the search bar




# Do you want to associate your Clients to your site?

In this way they can open their gates wherever they are!  
Simply from their smartphone.

Click on “User management”  
and on “New user”

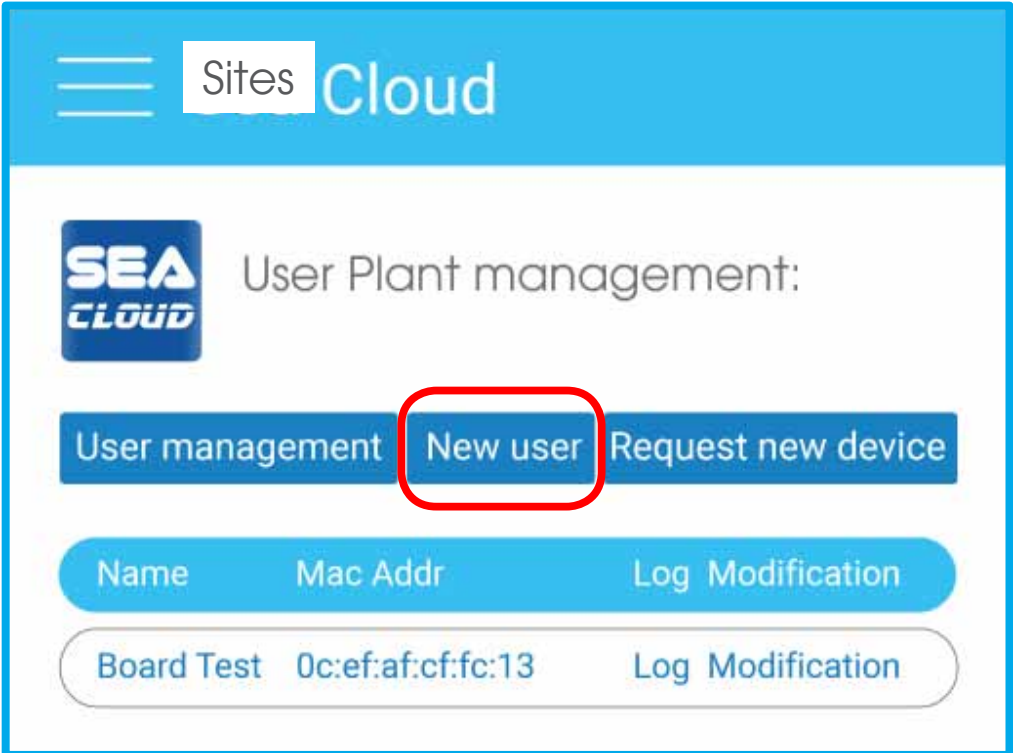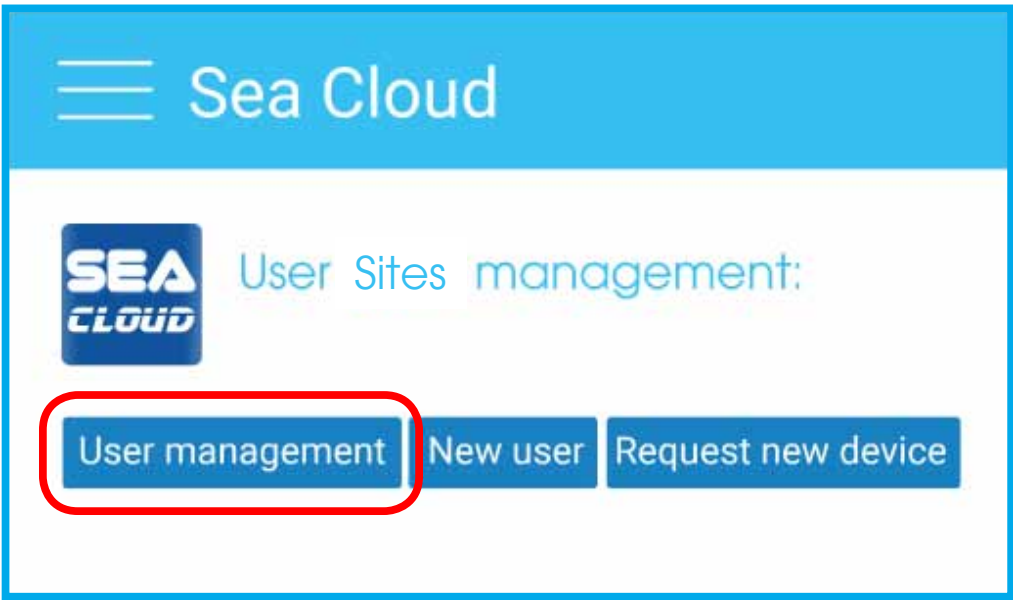

Enter all data of your end users

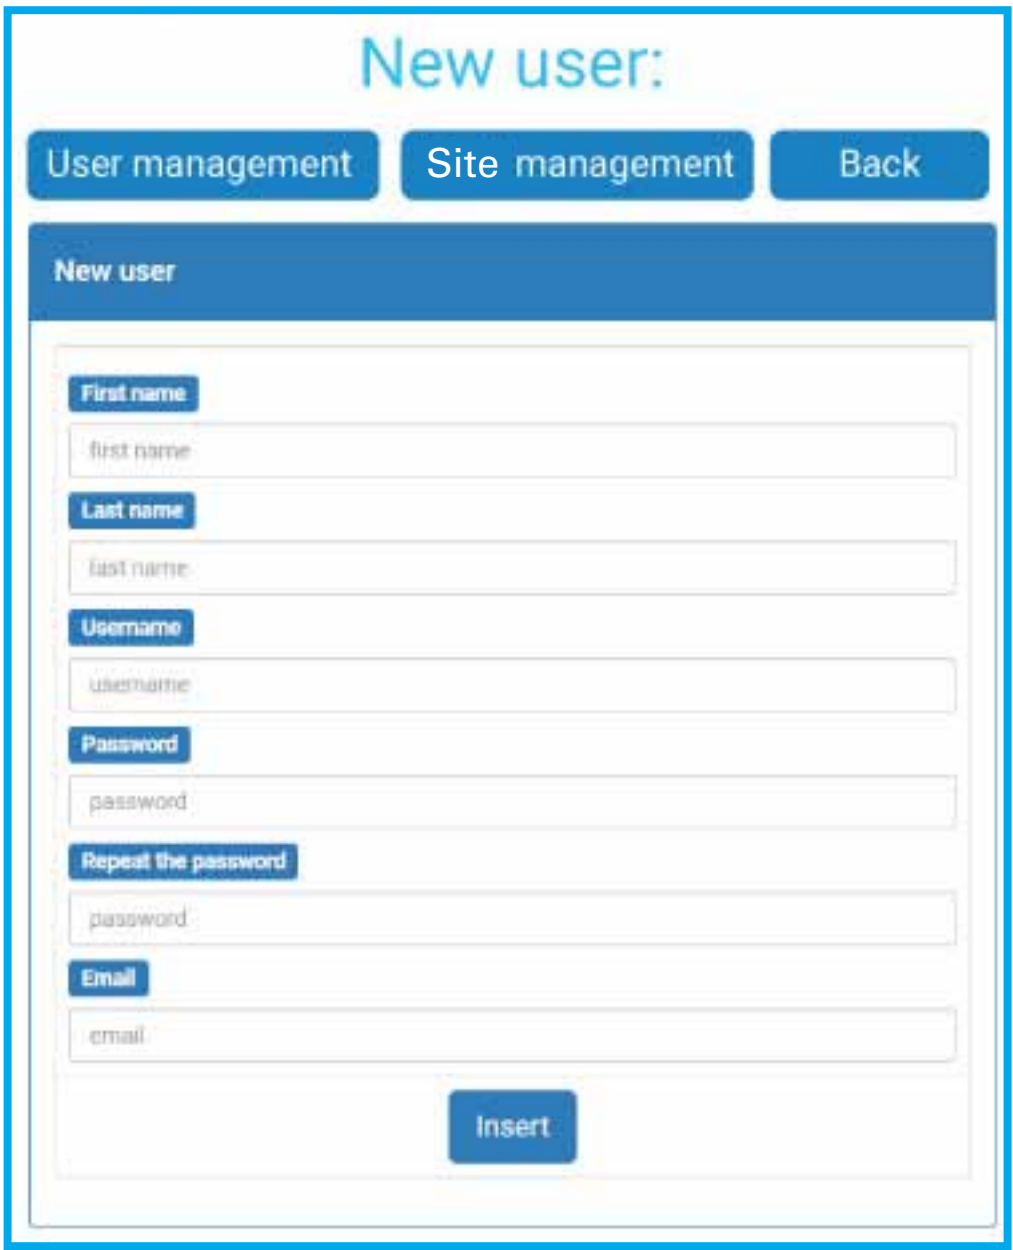

and their profile are created.

Click on “+” to associate the end user to his/her remote control




Provide username and password that you choose to your end user.

## Guida per l’utente finale

Download the Sea  
Cloud APP from




This is the remote  
control of your  
automations!

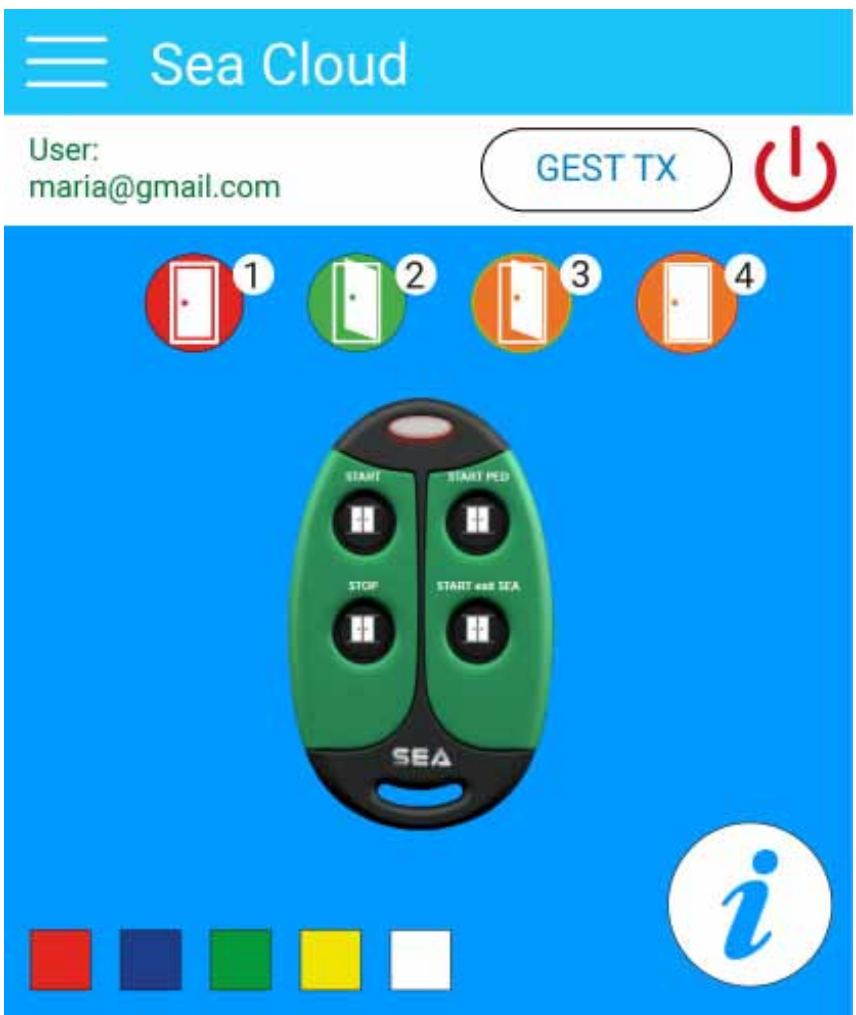

Enter the username and password provided by  
your installer



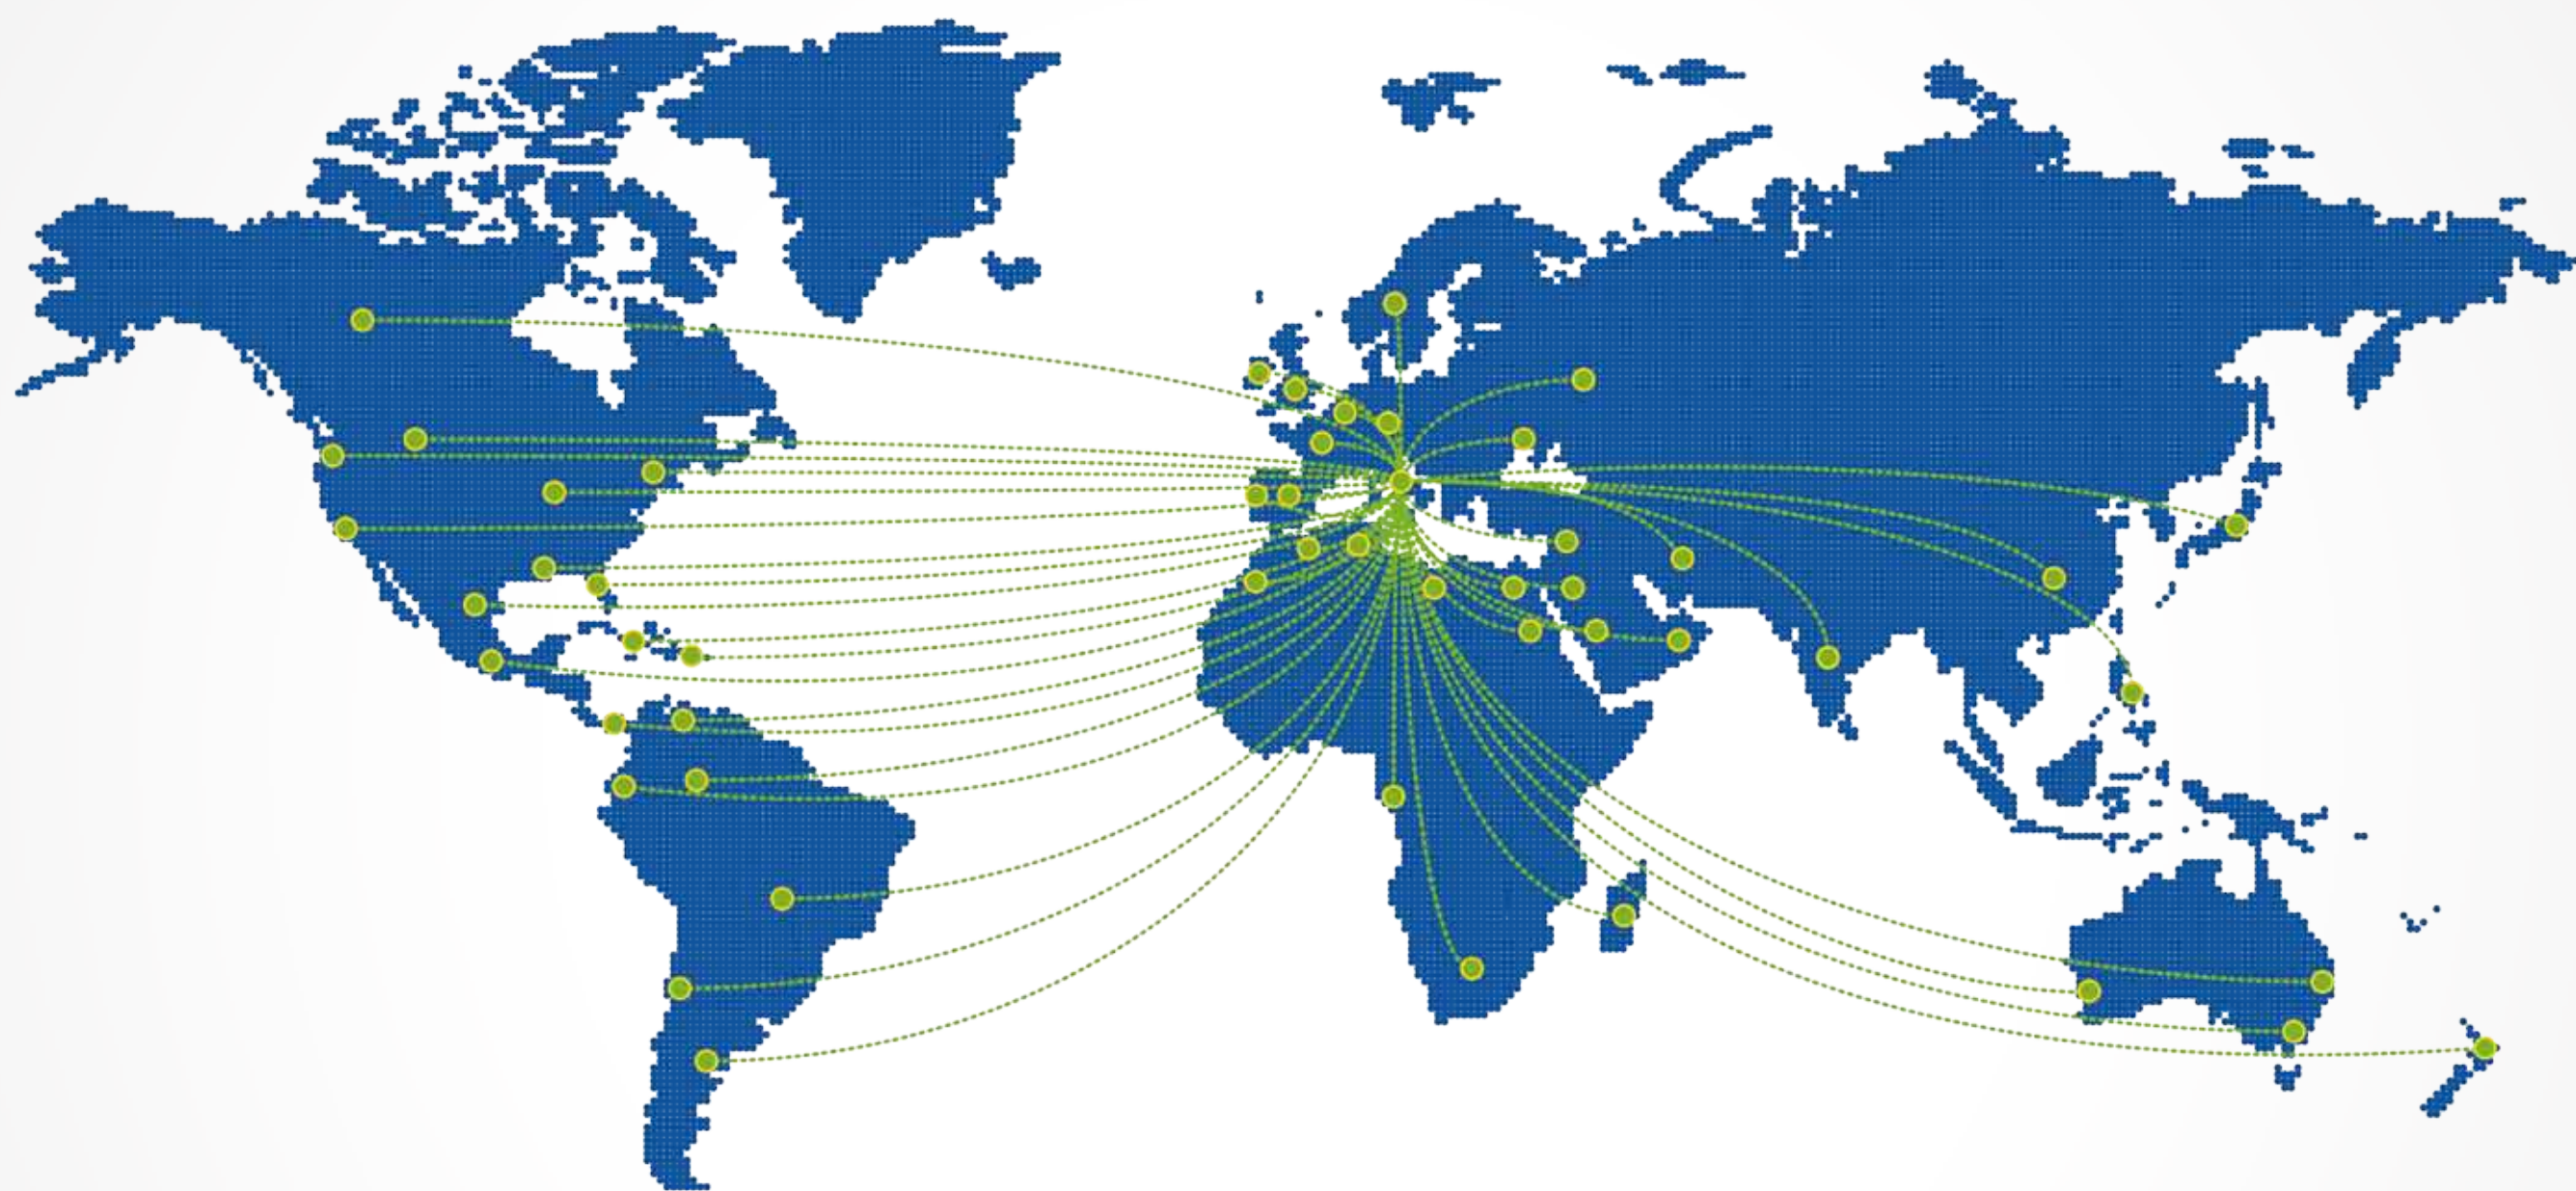

#### HEADQUARTER

##### **SEA S.p.A.**

Z.I. S. Atto  
64100 Teramo - Italy  
Phone: +39 0861 588341  
info@seateam.com  
www.seateam.com

#### SEA SUBSIDIARIES

##### **SEA USA, Inc.**

10850 N.W.21st Street unit 160  
33172 Miami - Florida (USA)  
Phone ++1-305.594.1151  
sales@sea-usa.com  
www.sea-usa.com

##### **SEA Automatismes France SARL**

4 Rue Paul Villard  
69680 Chassieu - France  
Phone: +33 472814245  
info@seafrance-automatismes.fr  
www.seafrance-automatismes.fr