


# SEA CLOUD



## PROFESSIONAL INSTALLER



to program  
Control Units  
wherever you are

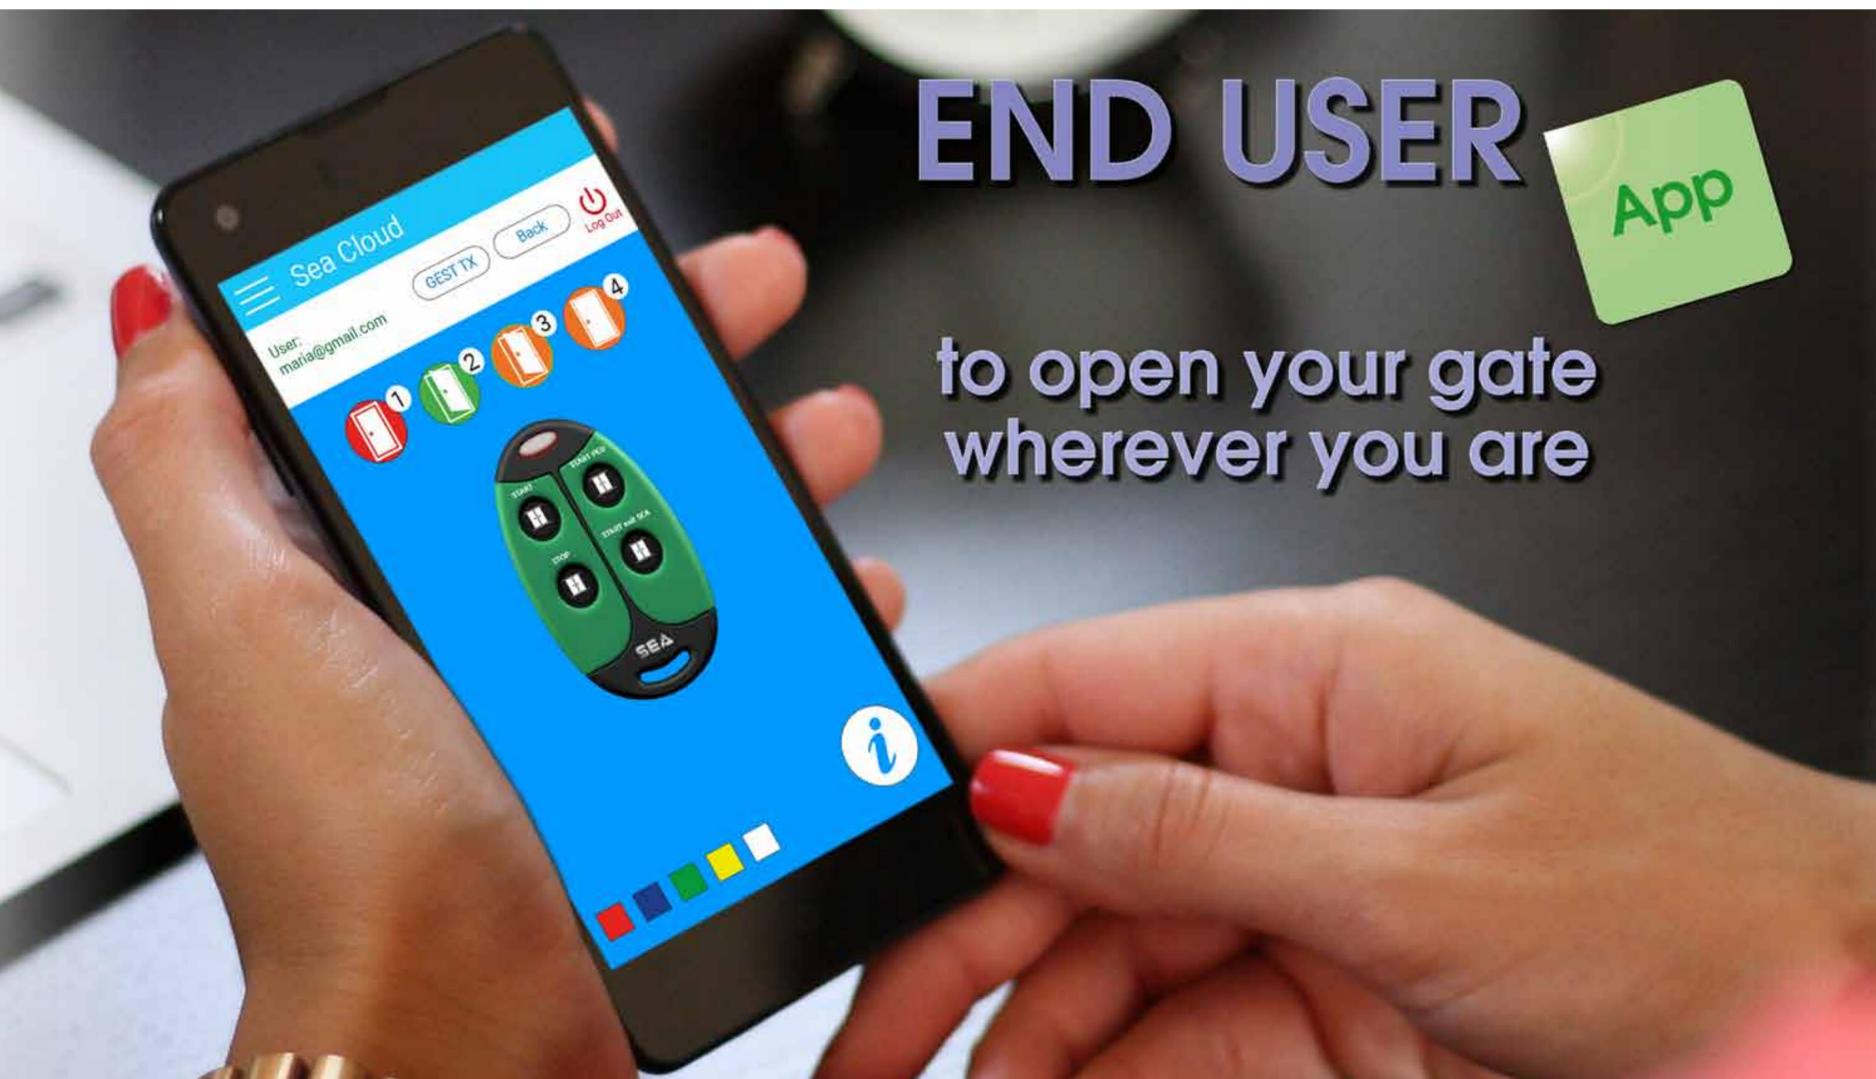


## END USER



to open your gate  
wherever you are

ENGLISH

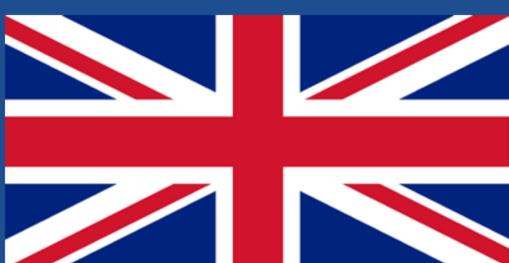


67412035 Rev. 01 - 03/2020

# Connections

## SEA CLOUD UNI IOT



### JOLLY/SEA-CLOUD ADAPTER MODULE FOR CONNECTION ON CONTROL UNIT

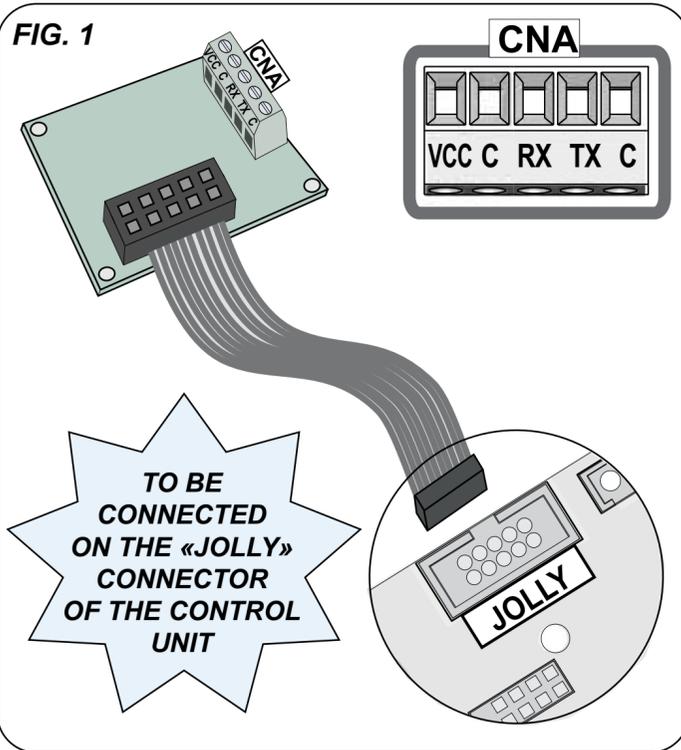


VCC = (+) POSITIVE POWER SUPPLY (from 12V to 28V $\overline{\text{=}}$ )  
 C = (-) NEGATIVE POWER SUPPLY  
 TX = TX SERIAL CONNECTION  
 RX = RX SERIAL CONNECTION

**NOTE 1:** CONNECT VCC (+) and C (-) TO THE RESPECTIVE POSITIVE AND NEGATIVE CONNECTORS ON THE SEA CLOUD UNI IOT MODULE ONLY IF THE CONTROL UNIT IS POWERED BY A STABILIZED SWITCHING POWER SUPPLY, WITH A VOLTAGE LOWER THAN 28V $\overline{\text{=}}$  (UNIGATE series or USER 2 ALL IN SW) - see FIG. 3

**NOTE 2:** IF OTHER CONTROL UNIT MODELS ARE IN USE, THEN USE AN EXTERNAL STABILIZED POWER SUPPLY WITH VOLTAGE BETWEEN 12V and 28V $\overline{\text{=}}$  (1A) - see FIG. 4

**NOTE 3:** CONNECT THE RX and TX ON CNA OF THE ADAPTER MODULE TO THE RX and TX ON CN1 OF THE SEA-CLOUD UNI IOT MODULE - see FIG. 3 and FIG. 4

### SEA-CLOUD UNI IOT MODULE TO BE CONNECTED TO THE ADAPTER MODULE

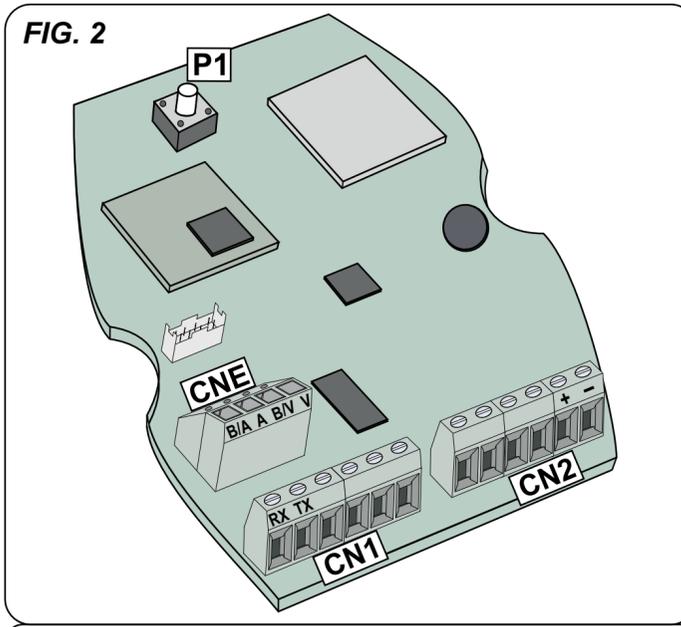

**CN1**  
 RX TX

**CN2**  
 + -

**CNE**  
 B/A A B/V V



TX = TX SERIAL CONNECTION  
 RX = RX SERIAL CONNECTION  
 + = POSITIVE POWER SUPPLY (from 12V to 28V $\overline{\text{=}}$ )  
 - = NEGATIVE POWER SUPPLY

**ETHERNET CABLES CONNECTION ON CNE**

B/A = WHITE/ORANGE  
 A = ORANGE  
 B/V = WHITE/GREEN  
 V = GREEN

**P1** REBOOT: HOLD PRESSED FOR 7 SECONDS  
 RESET (FACTORY DEFAULT): HOLD PRESSED FOR 12 SECONDS

### EXAMPLES OF CONNECTION

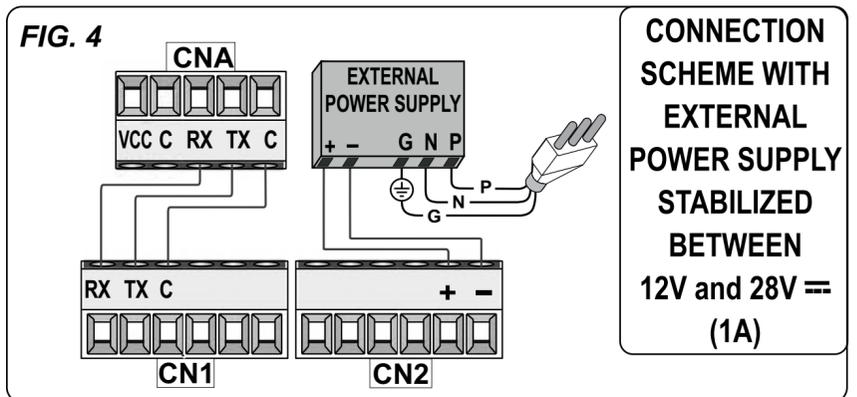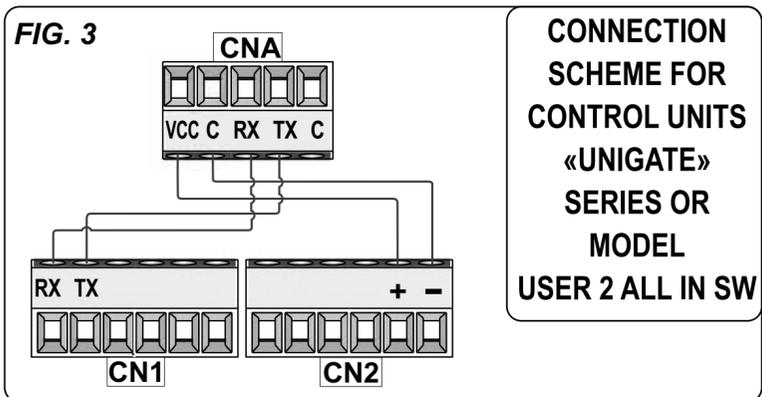


# Installer Guide


Are you a new Installer?

Visit [www.seacloud.pro](http://www.seacloud.pro) and click on the box to register and request access.

Only the first time!

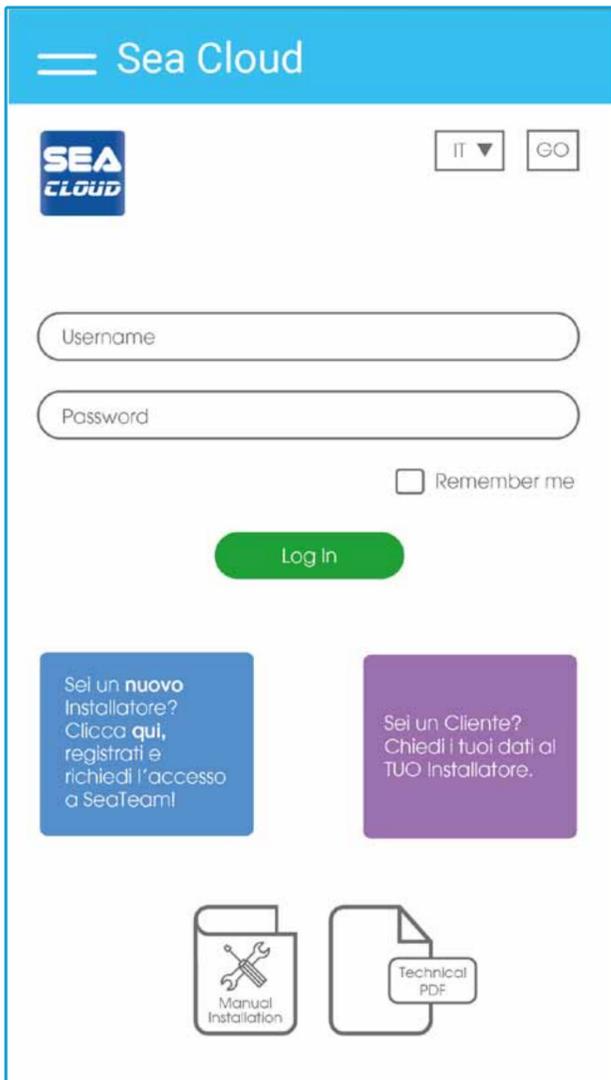

The image shows the Sea Cloud login page. At the top, there is a blue header with the Sea Cloud logo and a language dropdown menu set to 'IT'. Below the header, there are two input fields for 'Username' and 'Password', a 'Remember me' checkbox, and a green 'Log In' button. At the bottom, there are two buttons: a blue one for 'Sei un nuovo Installatore?' and a purple one for 'Sei un Cliente?'. There are also icons for 'Manual Installation' and 'Technical PDF'.

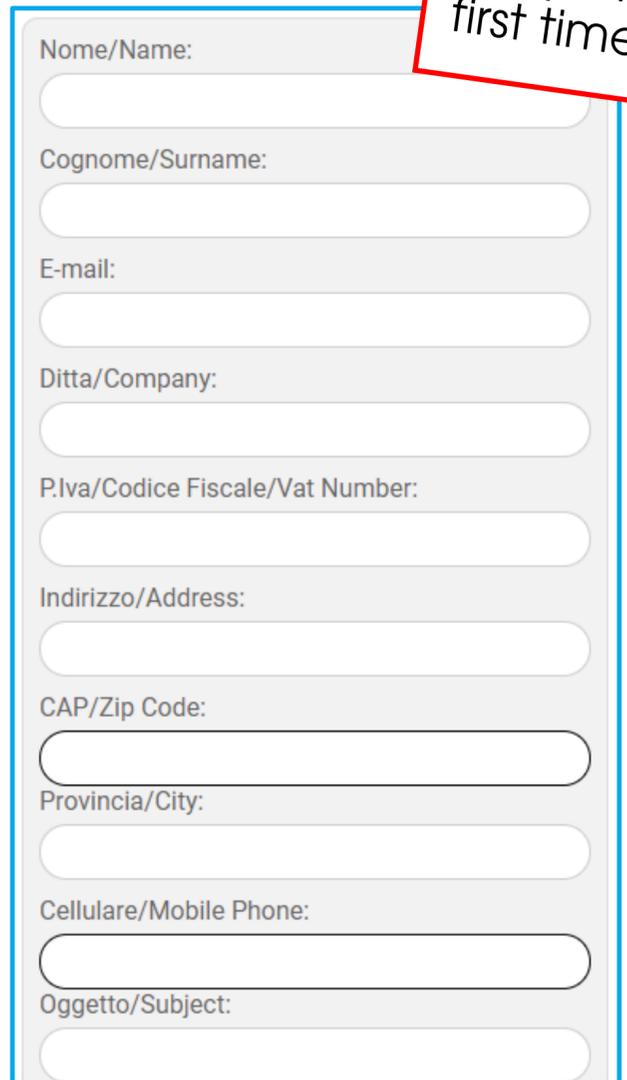

The image shows a registration form with the following fields: 'Nome/Name:', 'Cognome/Surname:', 'E-mail:', 'Ditta/Company:', 'P.Iva/Codice Fiscale/Vat Number:', 'Indirizzo/Address:', 'CAP/Zip Code:', 'Provincia/City:', 'Cellulare/Mobile Phone:', and 'Oggetto/Subject:'. A red box highlights the 'Nome/Name:' field with the text 'Only the first time!'.

You will receive an email from SEA with your user name and password. Enter them.

Now request a new device:



The image shows the 'Gestione impianti utente' page. It has three buttons: 'Gestione utenti', 'Nuovo utente', and 'Richiesta nuovo dispositivo' (highlighted with a red box). Below the buttons is a table with columns 'Nome', 'Mac Addr', 'Log', and 'Modifica'. The first row shows 'Sea Azienda', '0c:ef:af:cf:fd:00', 'Log', and a pencil icon.

Fill in the form, you can find the MAC address here:



The image shows the 'Richiesta nuovo dispositivo' form. It has a 'Back' button and the following fields: 'Nome Impianto', 'E-mail Installatore registrata' (with a note 'Installer Mail already registred:'), 'Ditta/Company:', 'MAC Address: ( example 0C:EF:AF:FC:FD:13)', 'Tipo di impianto' (with a dropdown menu 'Scegli/Select'), 'Cellulare/Mobile Phone:', and 'Oggetto/Subject:'.

You will receive a confirmation email by SEA.  
After that your device is available into the list of your Sites.



Now, it's time to connect the router to the gate, choose the method you prefer:

- 1 **Cavo LAN** 
- 2 **Powerline Adapter** 
- 3 

Each type of configuration can be performed by any type of device.


## LAN Cable configuration

If your home router has DHCP enabled, just connect the Ethernet cable to the LAN socket.

Connect the router to the socket and wait that the light becomes fixed.

Didn't you connect the LAN cable to the router?  
You can do it through a Powerline Adapter!




## Powerline Adapter configuration

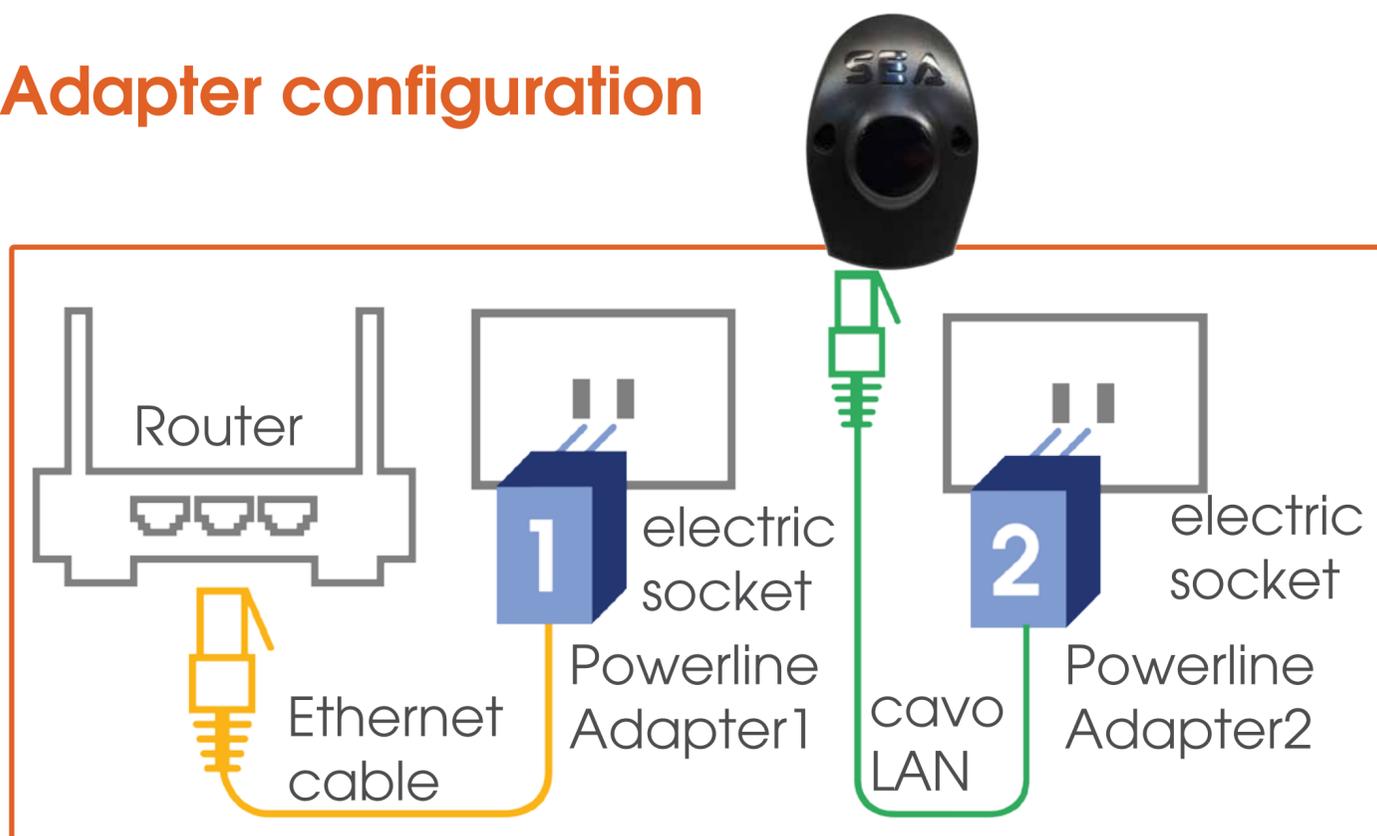

Connect the LAN cable into LAN entry of the router.

# Wi-Fi configuration

1. Connect the router to the socket and wait that the light becomes fixed
2. User your phone or PC, to find Wi-Fi network of Wi-Fi del SEA Cloud UNI IOT **SEA XXXXXX** (SEA MAC ADDRESS of SEA Cloud UNI IOT device)
3. Enter into Wi-Fi of the device and insert the password **seacloud**
4. Click on the Wi-Fi you prefer
5. Open any browser, write the IP: **192.168.4.1** and press ENTER

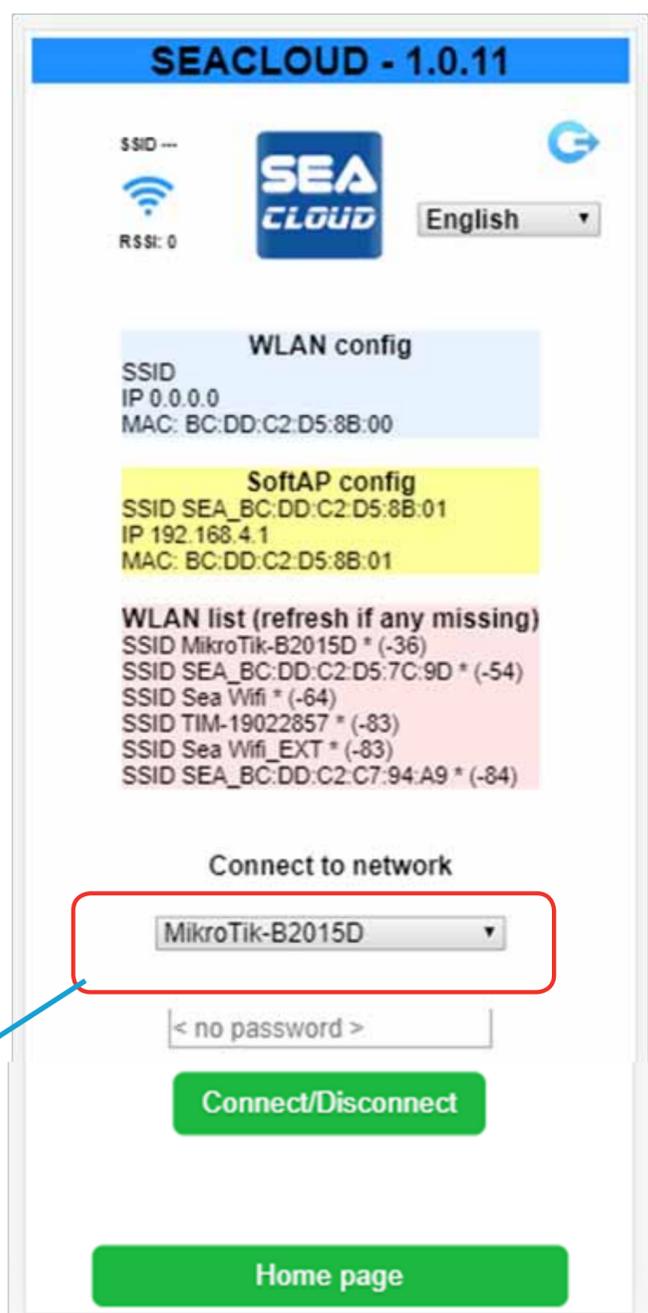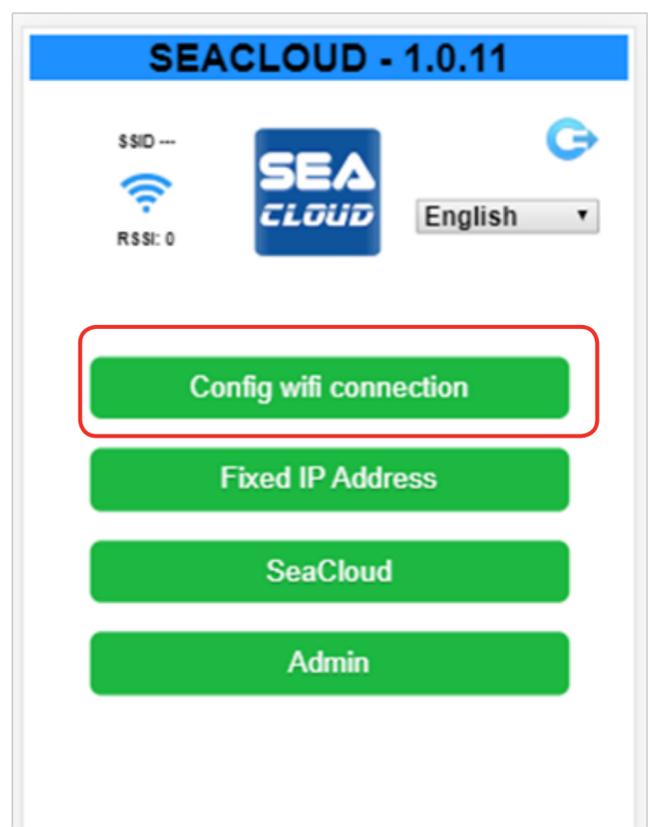
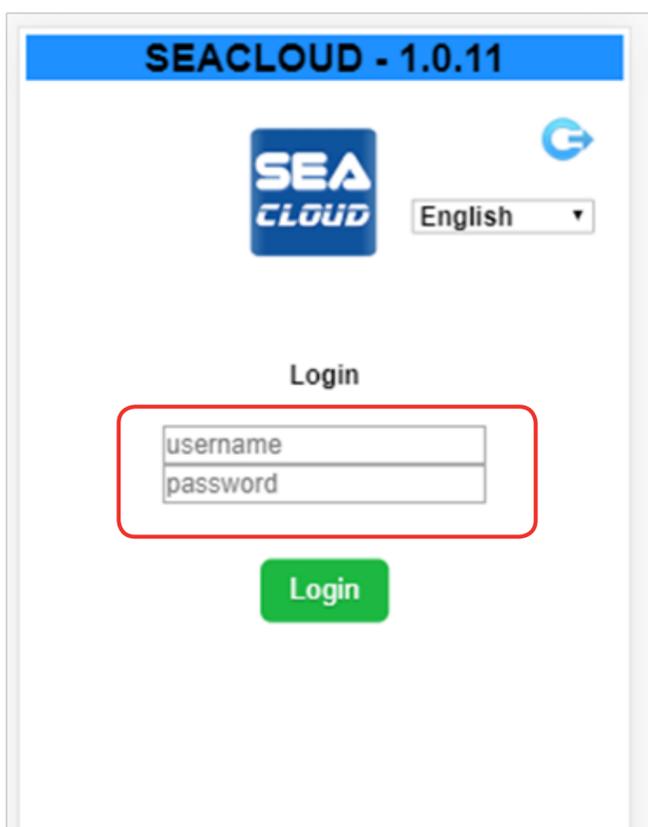


Enter the following default credentials and press ENTER (the password can be changed later):  
Username: admin  
Password: admin

Scegli la Tua rete Wi Fi ed inserisci la password



# STATIC IP CONFIGURATION

Enter your data

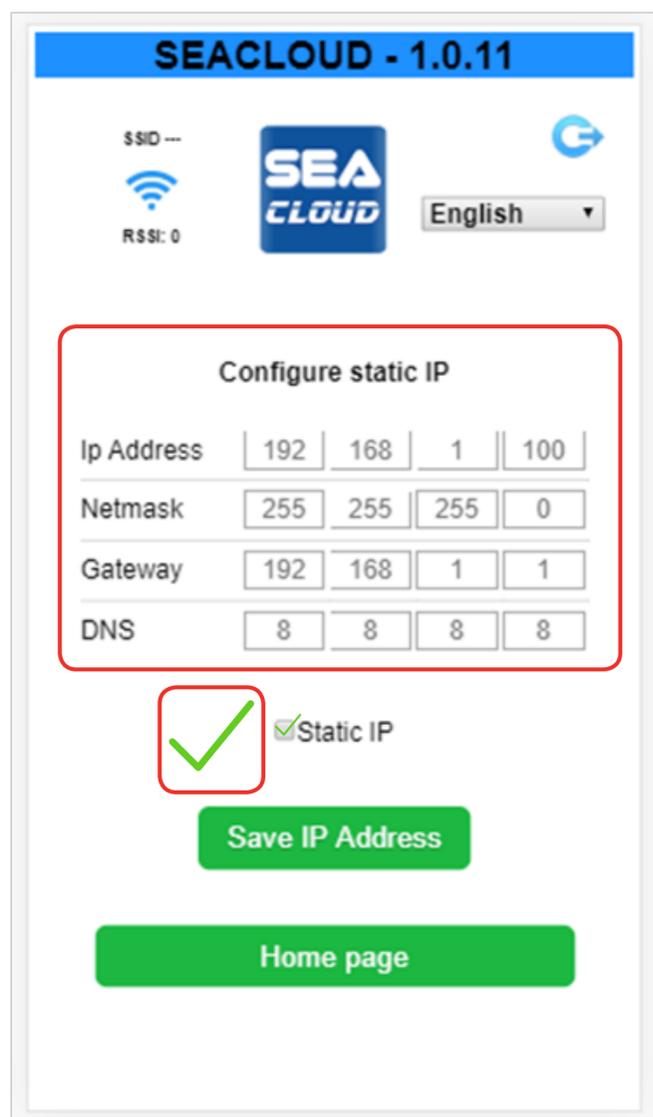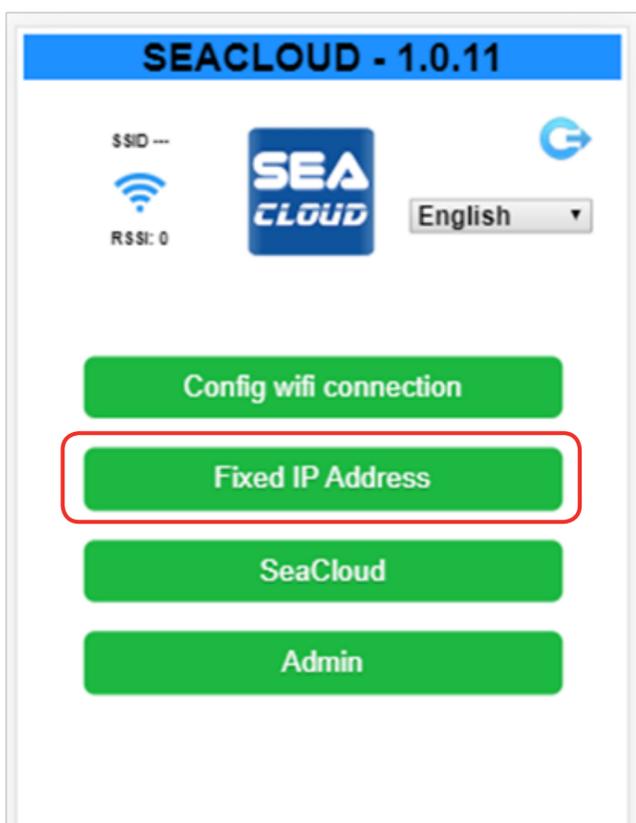


# Change "Administrator Password"


Password di default : admin  
Change your password

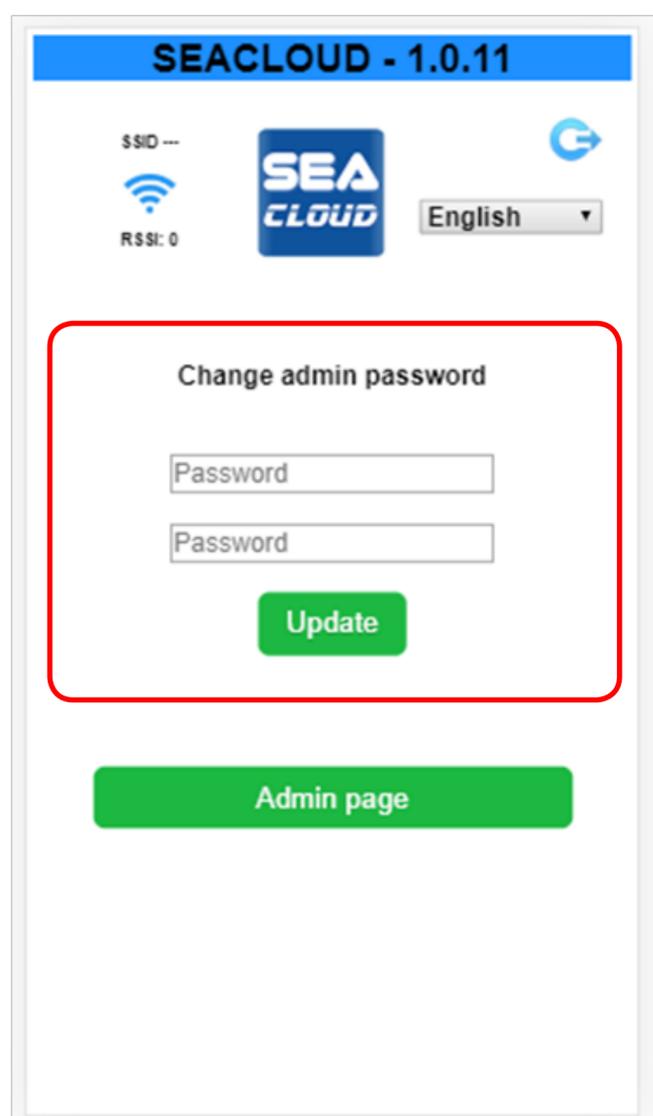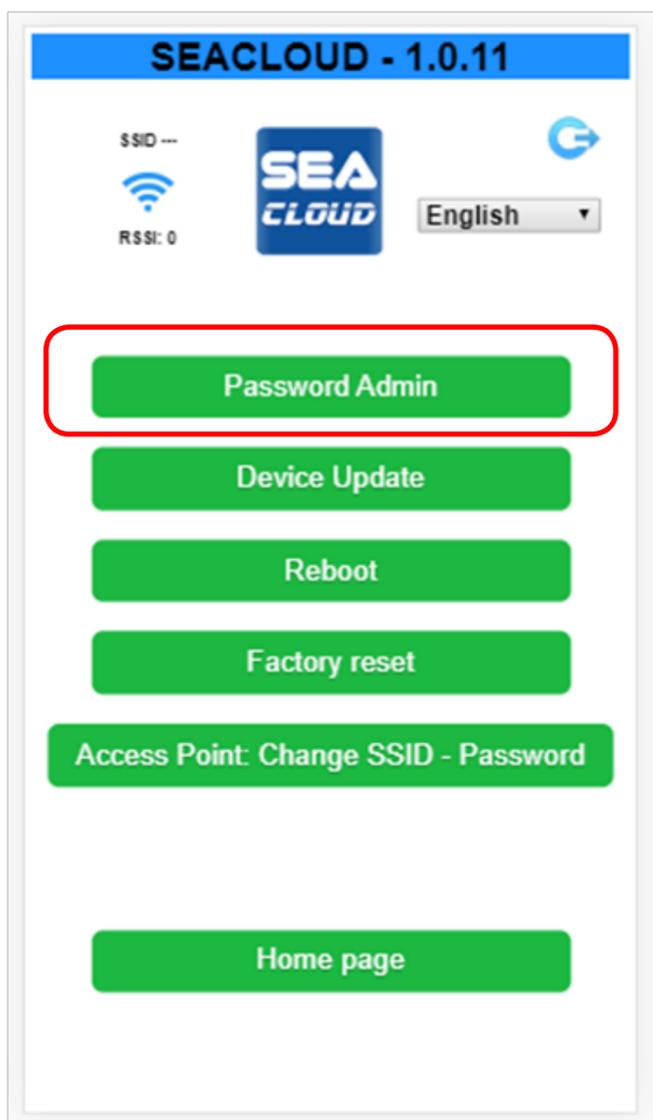


# Devise Update

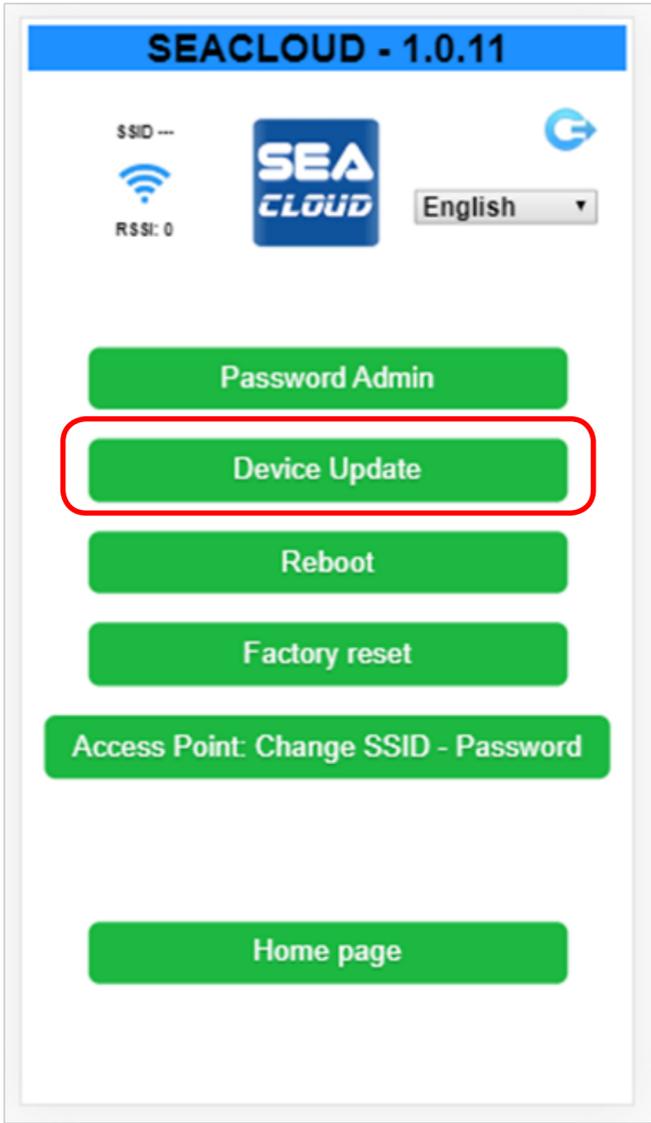


Update OTA of device

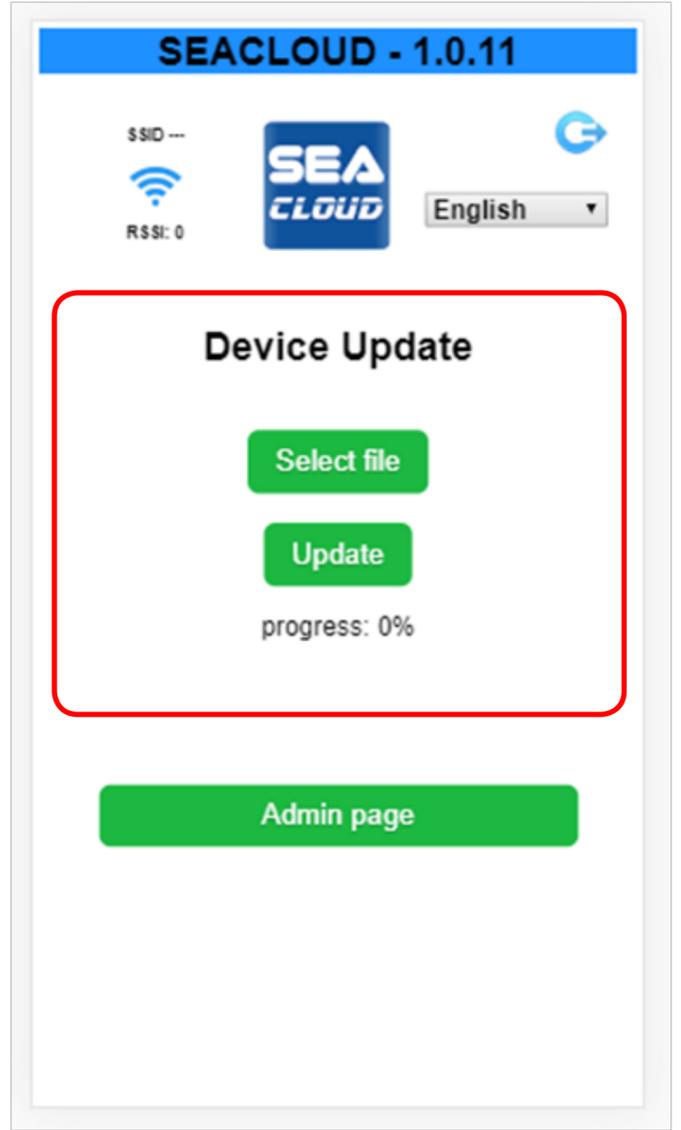

# Riavvia


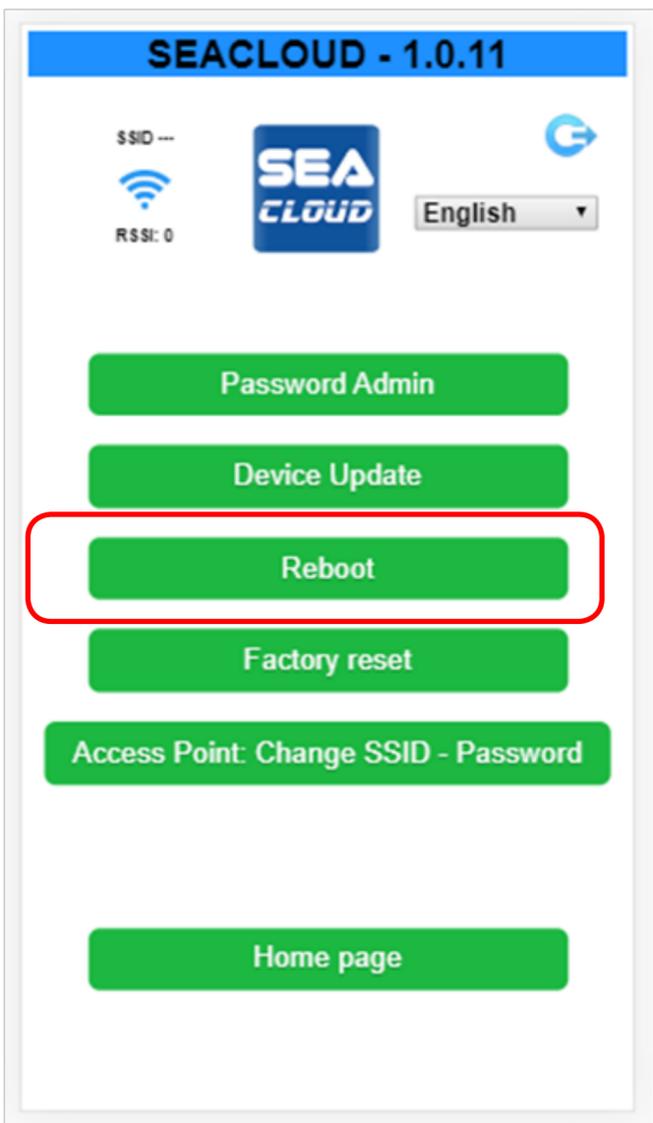


Reboot your device

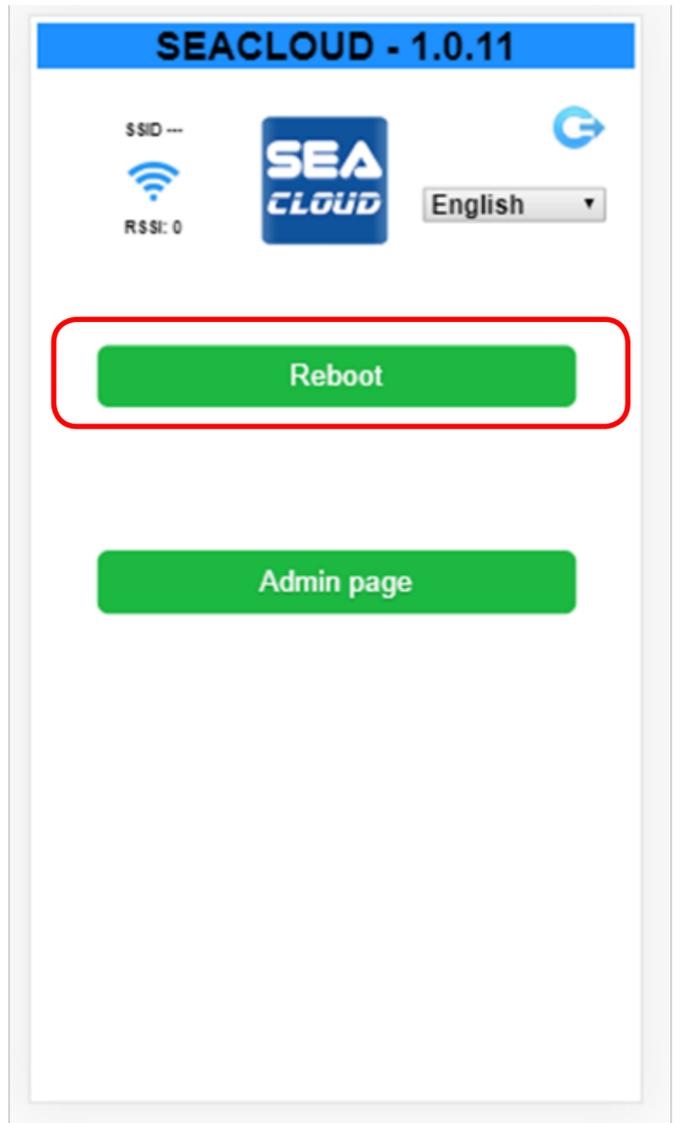



# Factory Reset

Factory reset, cancellation of all settings

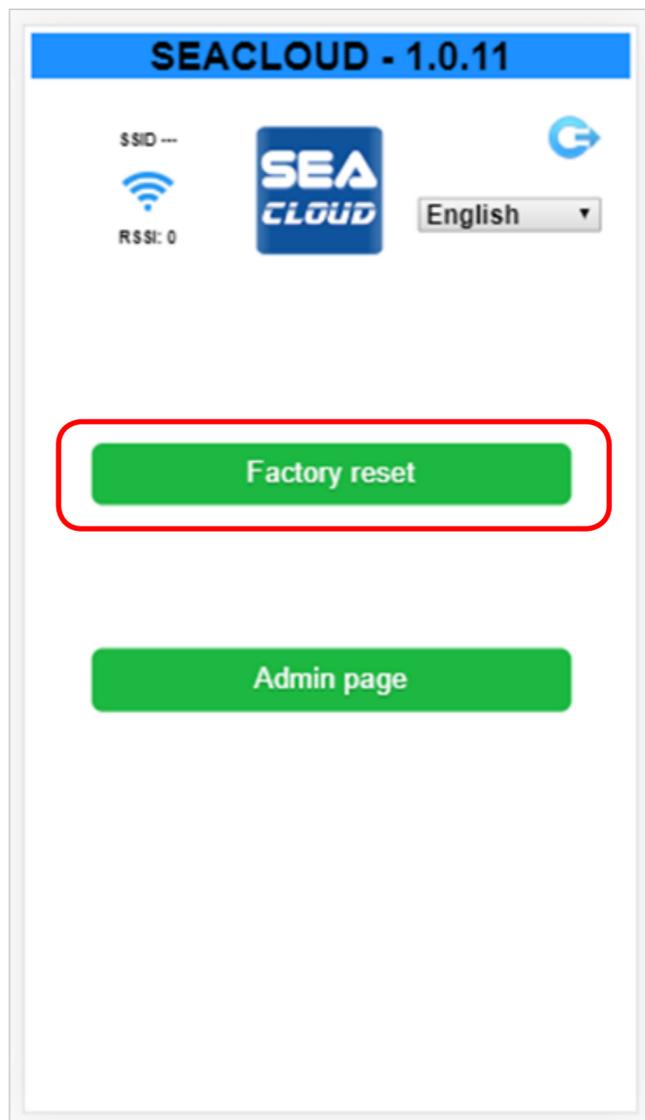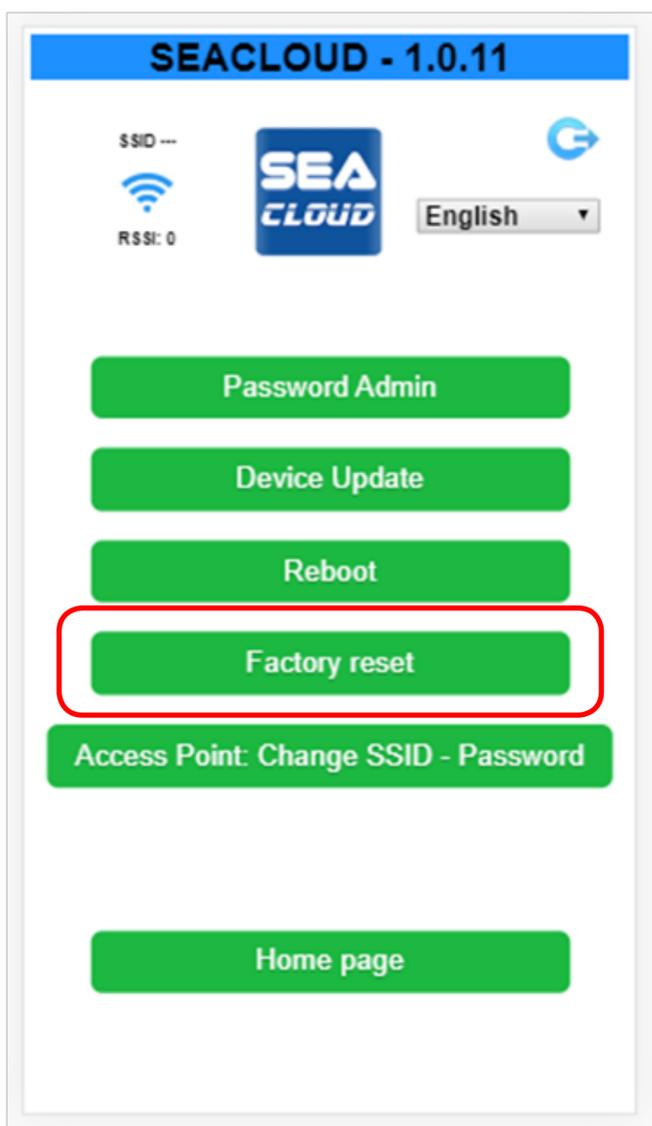

# Access Point change SSID - password

Rename the device's WI FI access point

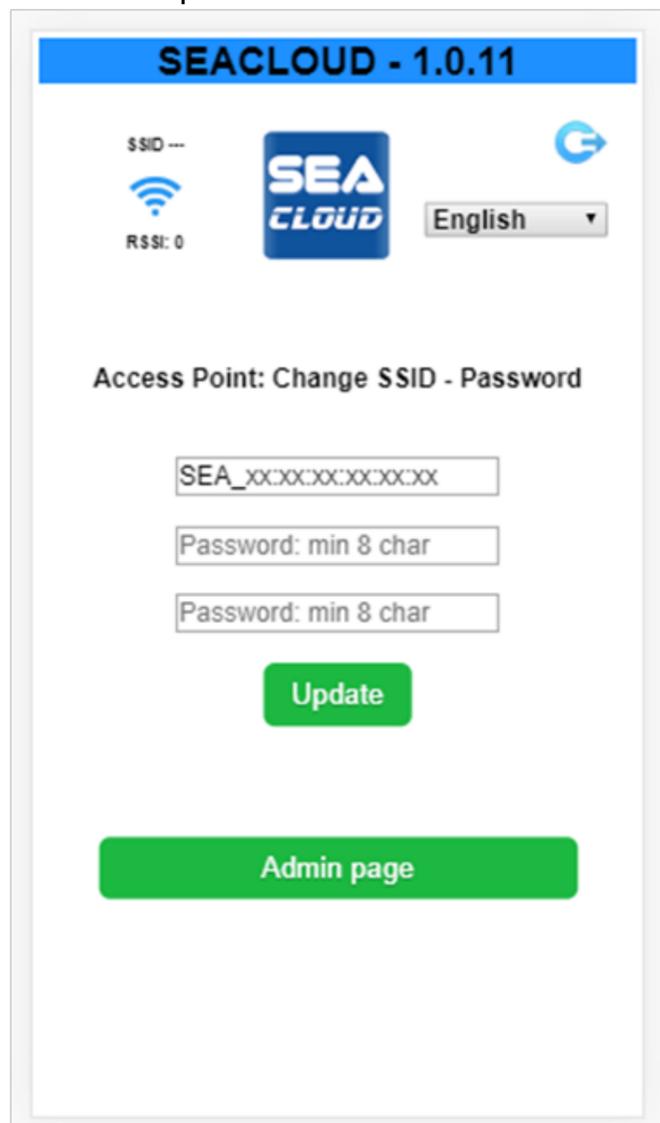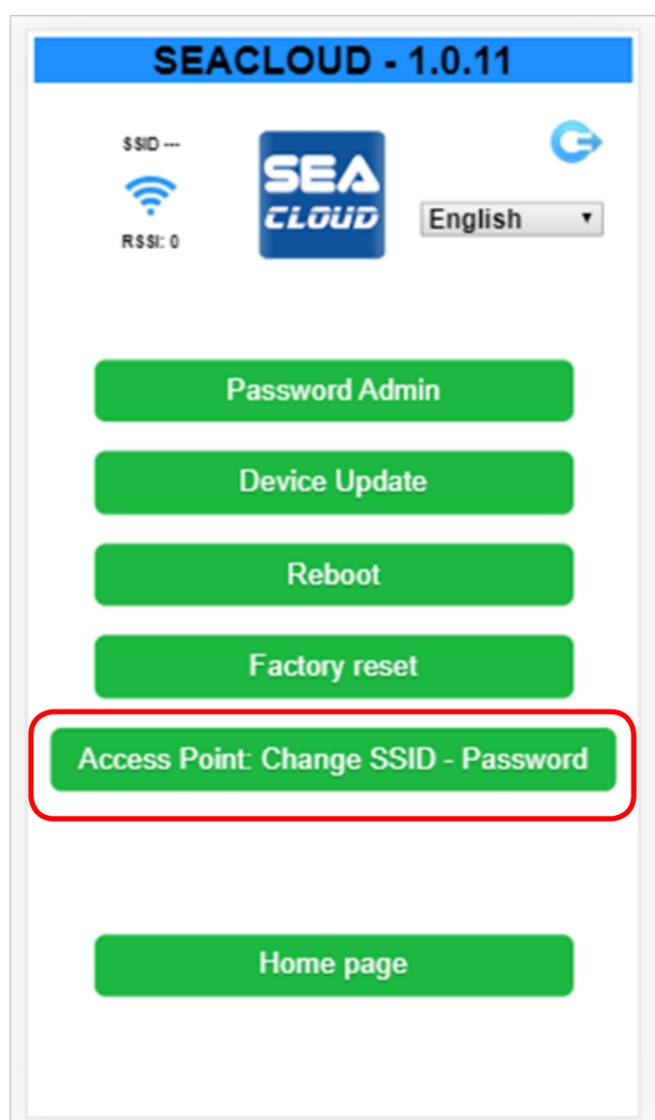



# Now you can enter into the Sea Cloud APP and manage your devices.

Download the I'APP Sea Cloud on the Google Play or Apple Store.



## SEA Cloud

Enter all data of your end users

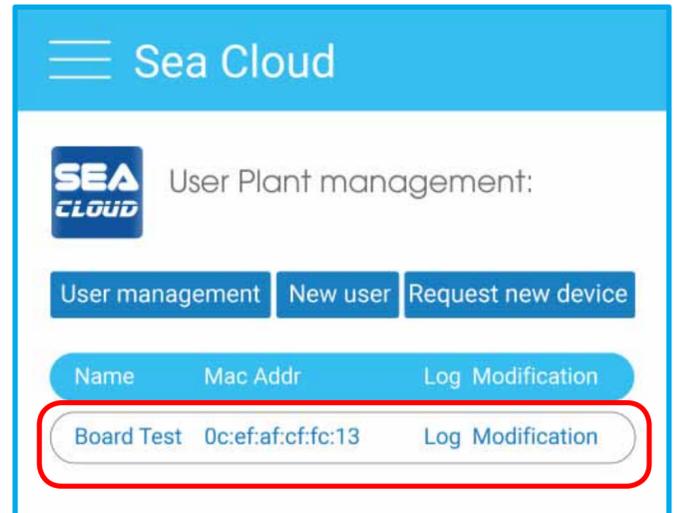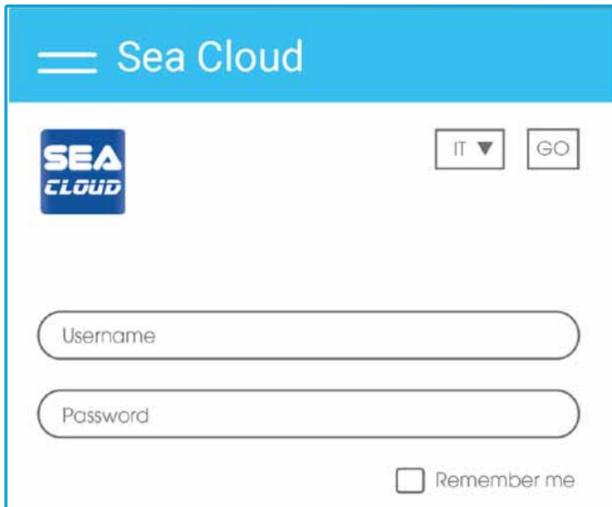

Click on your device to manage your Control Board:

**TEST**  
verify the status of the entrance

**SERVICE**  
reset work cycles

**@ALARM**  
receive email of alarms

**@FAULT**  
receive email of faults

**UP**  
scroll up

scroll down

**OK**  
confirmation

**START**  
open/close command

**STOP**  
stop command

**START Pedestrian**  
partial opening command

**MENU BOX LIST**


you can scroll down the entire menù or text the number of the menù that you want in the search bar

*Compatible with control units with revision Firmware 2.0 and later*

# Do you want to associate your Clients to your site?


In this way they can open their gates wherever they are!  
Simply from their smartphone.

Click on "User management"  
and on "New user"

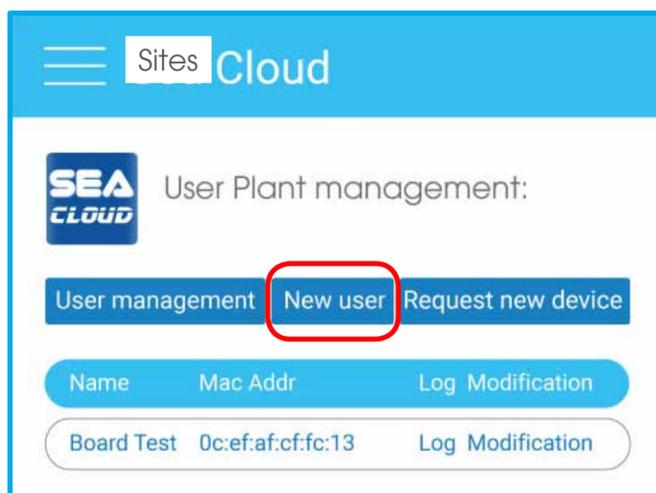

Enter all data of your end users

and their profile are created.

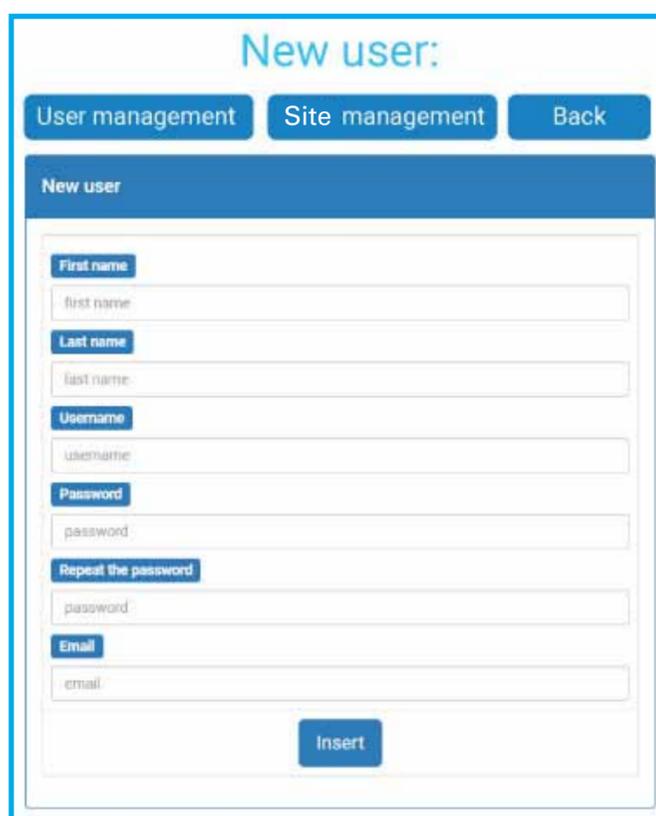

Click on "+" to associate the end user to his/her remote control



Provide username and password that you choose to your end user.

## Guida per l'utente finale


Download the Sea Cloud APP from



This is the remote control of your automations!



Enter the username and password provided by your installer

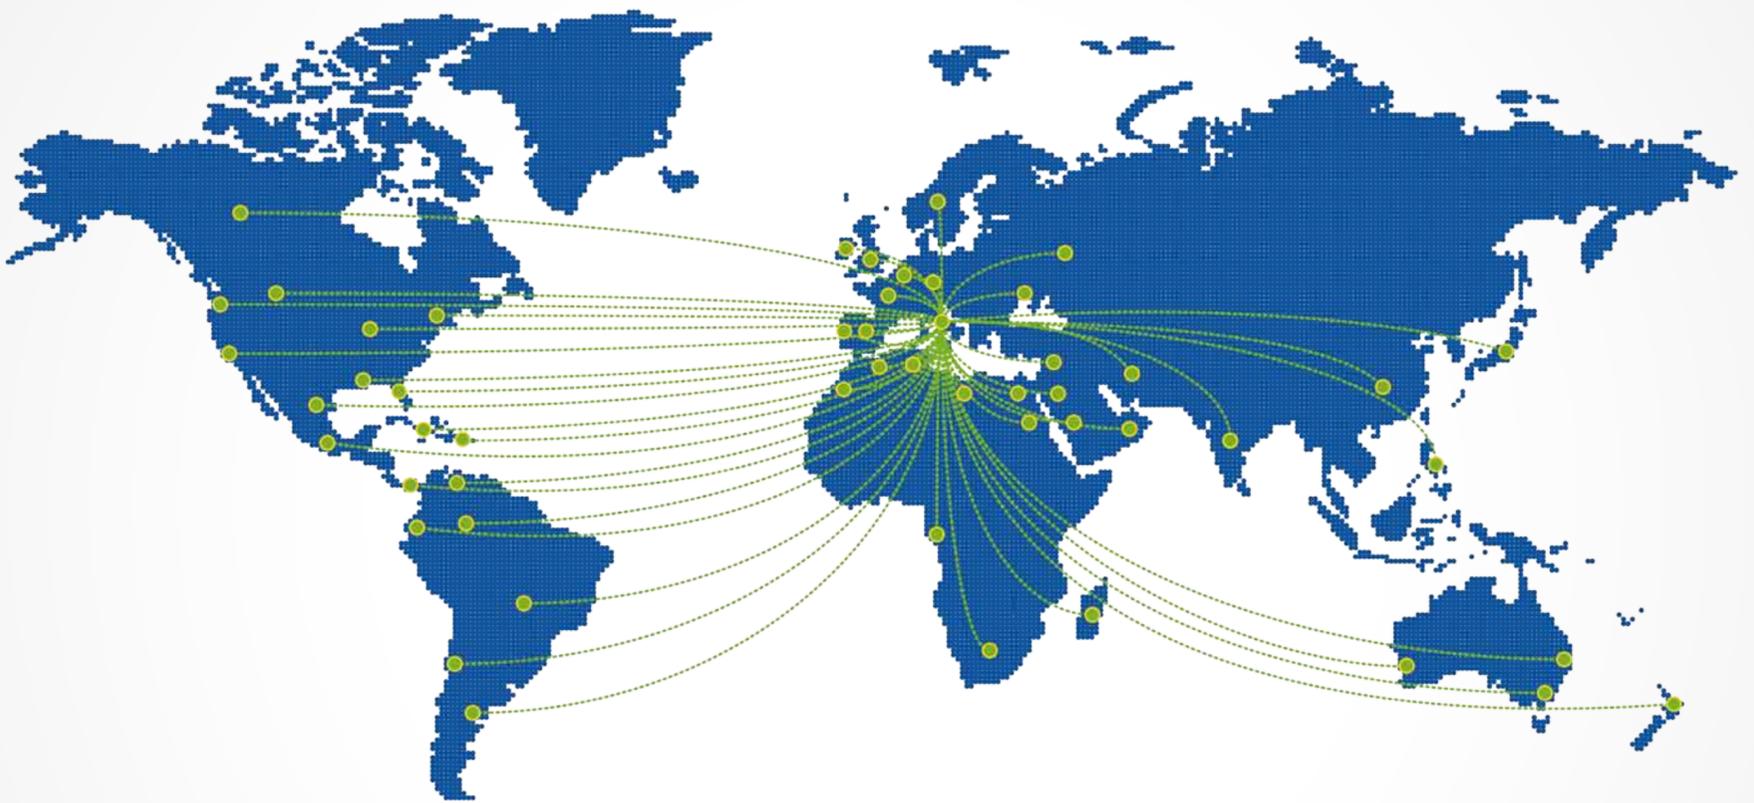

#### HEADQUARTER

**SEA S.p.A.**  
Z.I. S. Atto  
64100 Teramo - Italy  
Phone: +39 0861 588341  
info@seateam.com  
www.seateam.com

#### SEA SUBSIDIARIES

**SEA USA, Inc.**  
10850 N.W.21st Street unit 160  
33172 Miami - Florida (USA)  
Phone ++1-305.594.1151  
sales@sea-usa.com  
www.sea-usa.com

**SEA Automatismes France SARL**  
4 Rue Paul Villard  
69680 Chassieu - France  
Phone: +33 472814245  
info@seafrance-automatismes.fr  
www.seafrance-automatismes.fr